
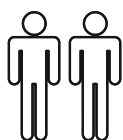
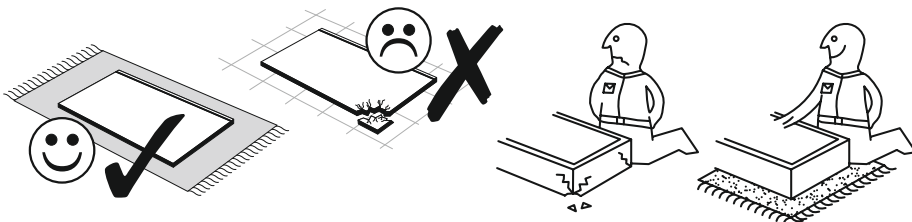
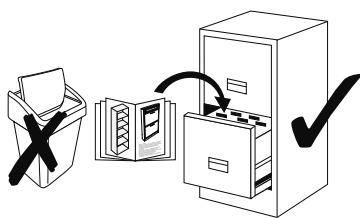
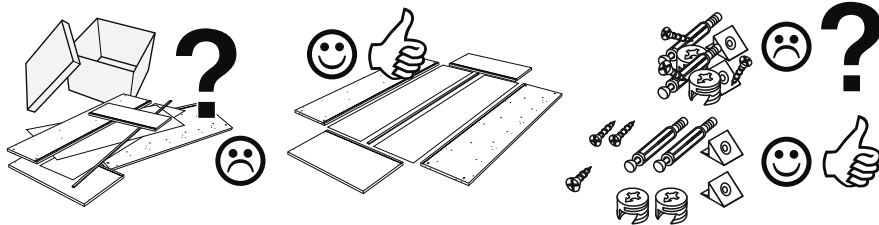


# 0772-LB\_001

## Lowboard

REPC-Nr.:

**Service • Assistenza • Dienstverlening • Serwis  
Servis • Szerviz • Сервисная служба**

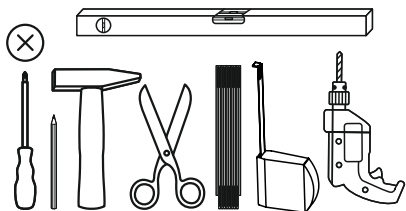























Colli 1/3 : ⑦

Colli 2/3 : ① ② ③ ④ ⑤ ⑥ ⑧ ⑨ Beutel 1/5, 2/5, 3/5, 4/5, 5/5


Colli 3/3 : ⑩

# CHICAGO

Beutel 1/5											
1-30		1-80		1-190		1-200		1-349		2-10	
11x	3x16	8x	3,5x13	6x	M4x20	4x	6,3x13	6x	M4	12x	h=12mm
2-20											
12x											
Beutel 2/5				Beutel 3/5							
1-123		2-173			3-07		3-11		3-41		
8x	4x15	4x			1x		3x		3x	0er	
Beutel 4/5											
2-103		5-01		5-130		5-260		5-265			
12x	8x30	4x		2x		1x		1x			
5-280		6-425									
1x		1x									
Beutel 5/5											
1-36											
4x	4x40										




## Colli 1/3




1163 x 316


## Colli 2/3

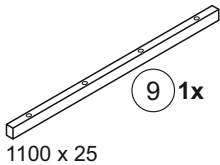











1100 x 25

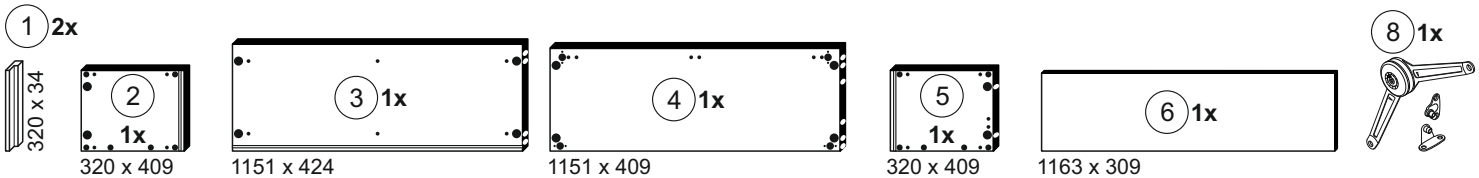

## Colli 3/3

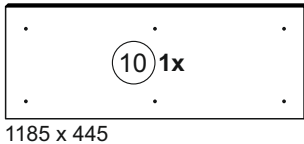

1185 x 445

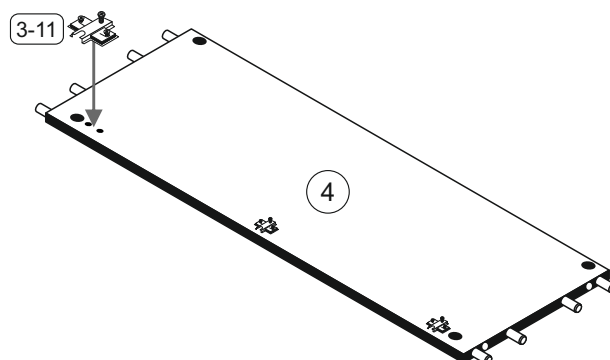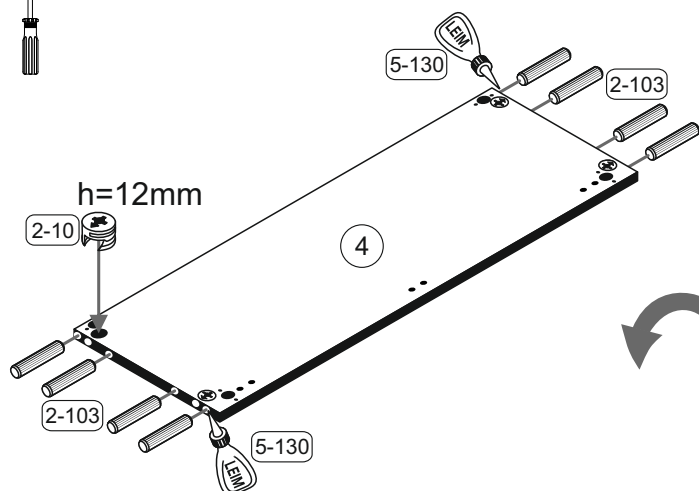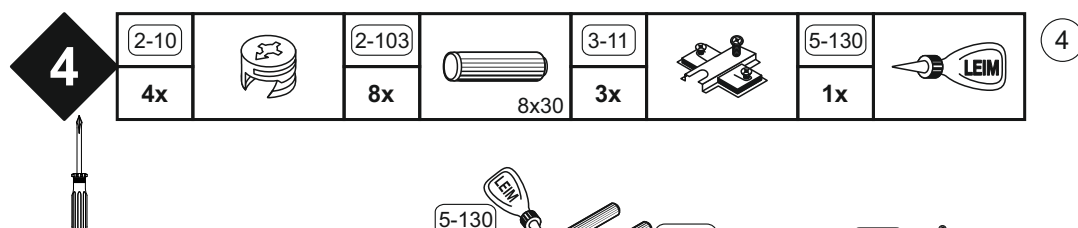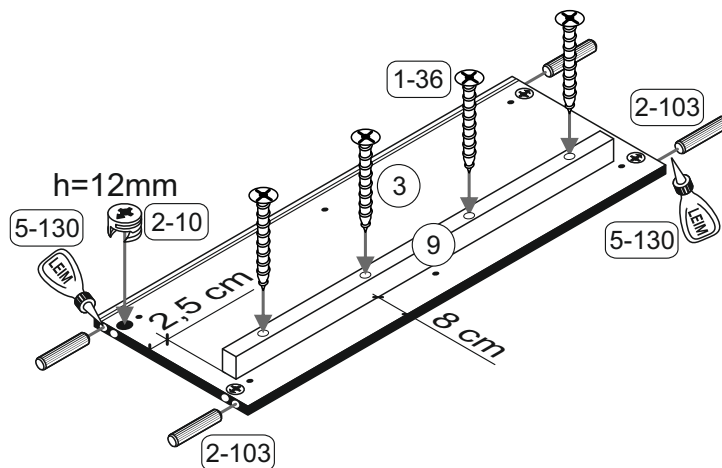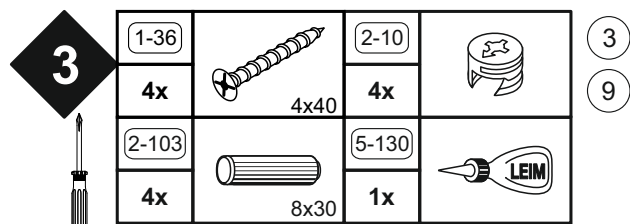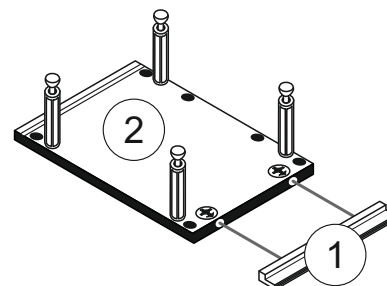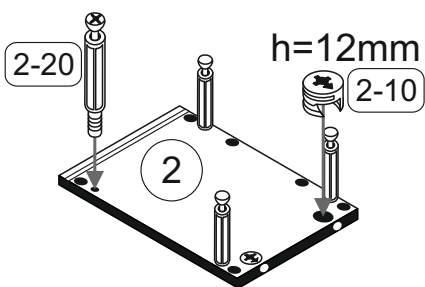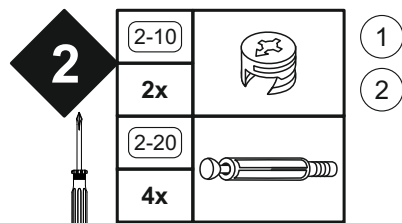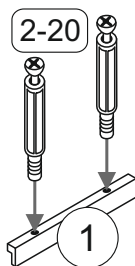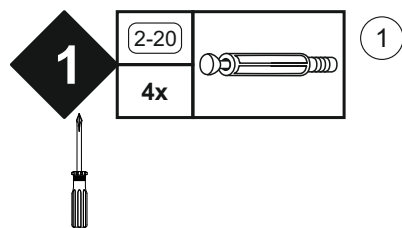


# CHICAGO

5


2-10

2x



2-20

4x




1


5

h=12mm

2-10




2-20



5

1




5

6

1-80


6x



3,5x13

1-200


2x



6,3x13

3-41


3x



0er

6-425


1x



7

1-80

3-41



1-200


6-425

7

7

5-130

1x



5

1

3

4

2

1

5-130

LEIM

5-130

LEIM

5-130





LEIM

5-130



LEIM

2-20




2-10

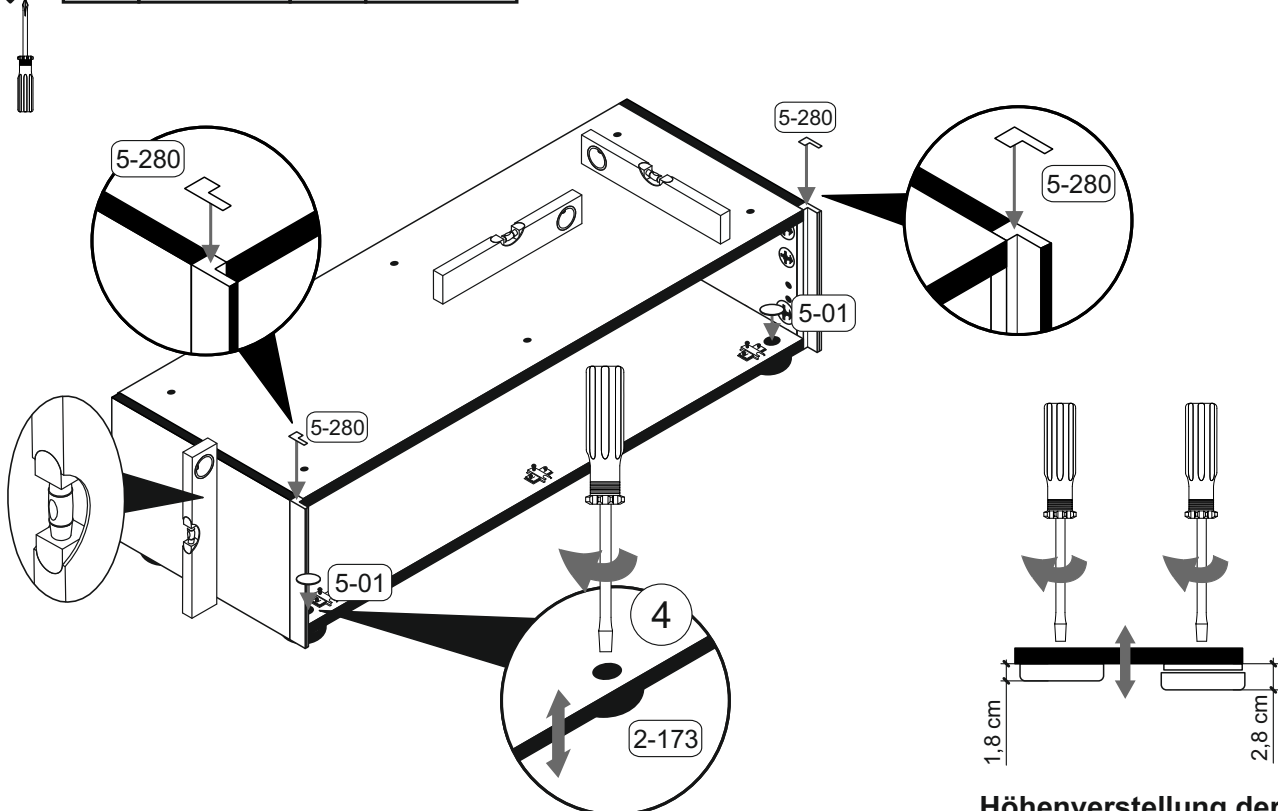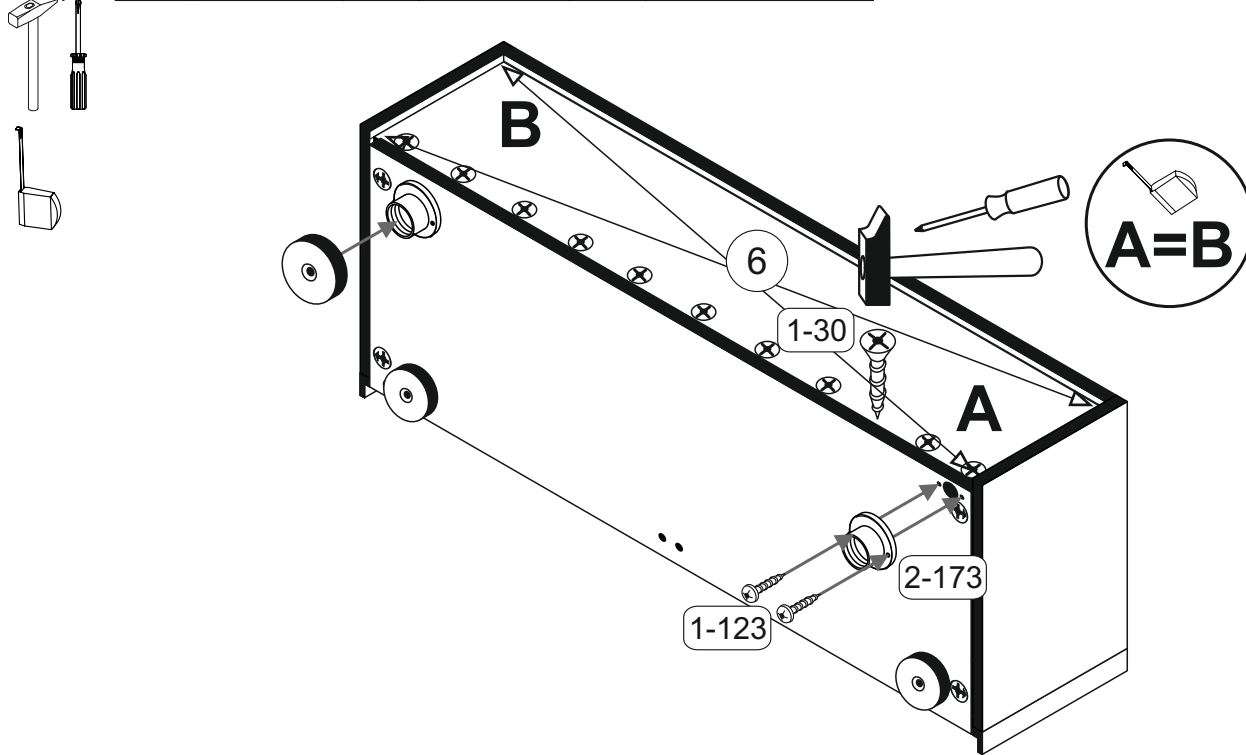


## Montage der Holzoberplatte

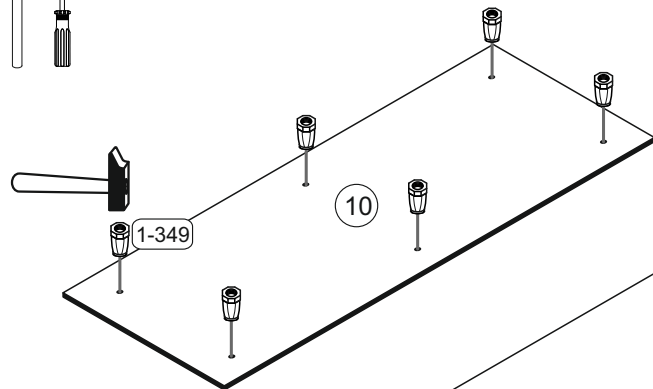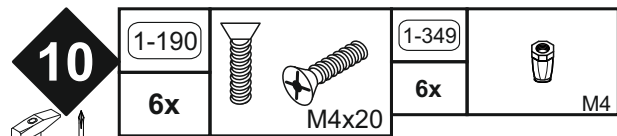



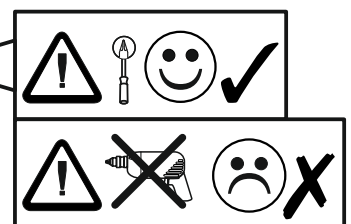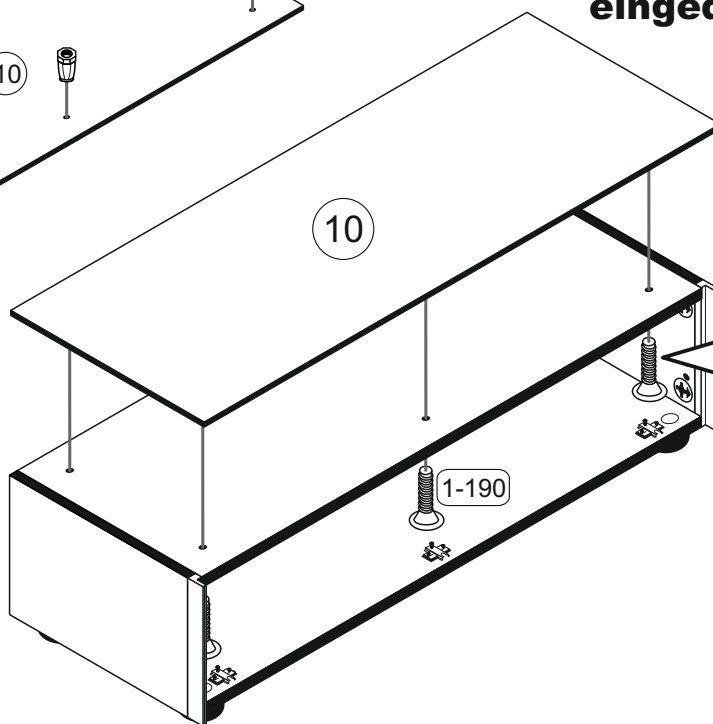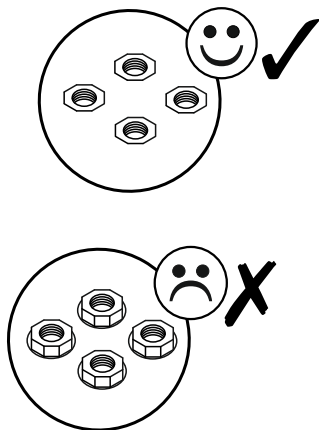

**Die Schrauben M4x20 1-190 müssen mit der Hand eingedreht werden.**



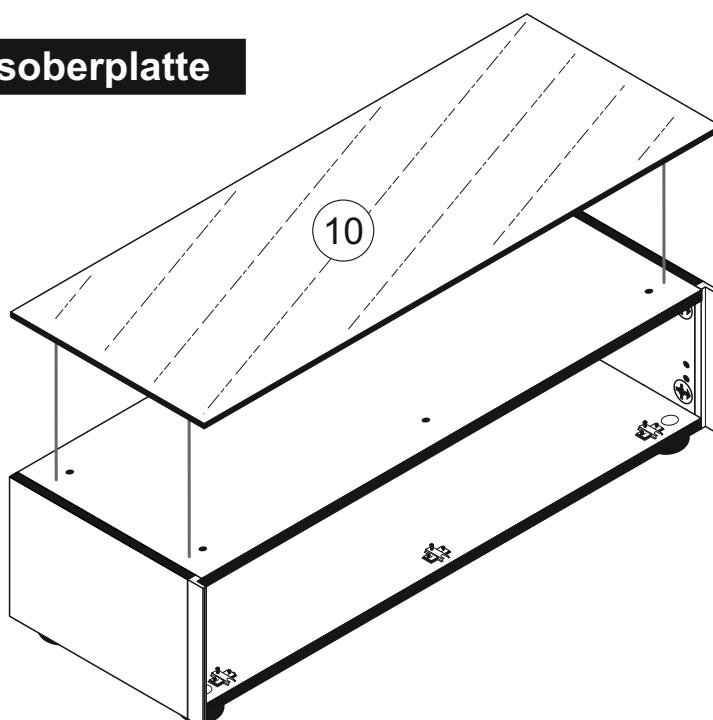


## Montage der Glasoberplatte




<b>11</b> 	(1-80) <b>2x</b>  3,5x13	(1-200) <b>2x</b>  6,3x13
	(3-07) <b>1x</b> 	

## Stütze unten <sup>(8)</sup> überdrehen

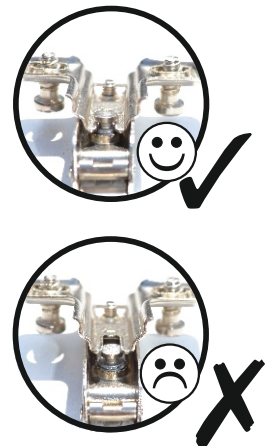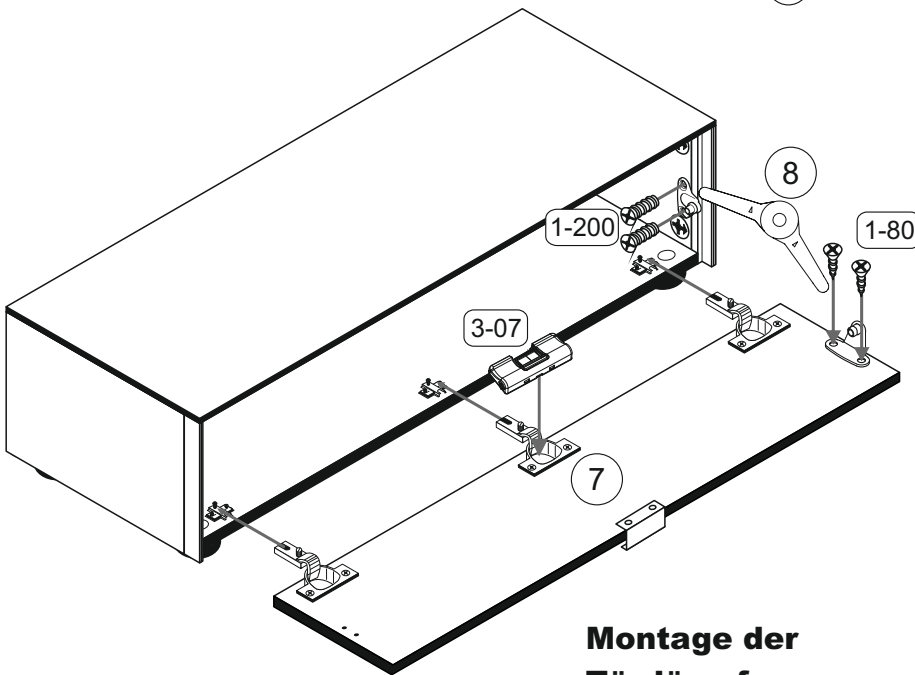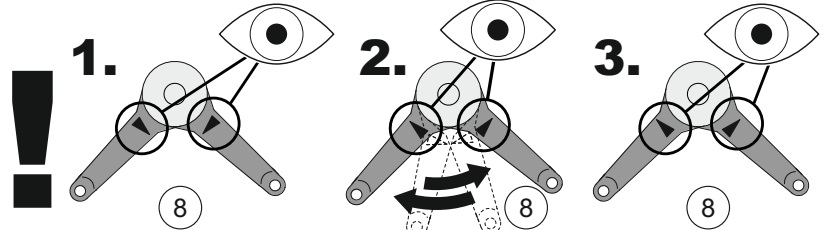

## Montage der Türdämpfung

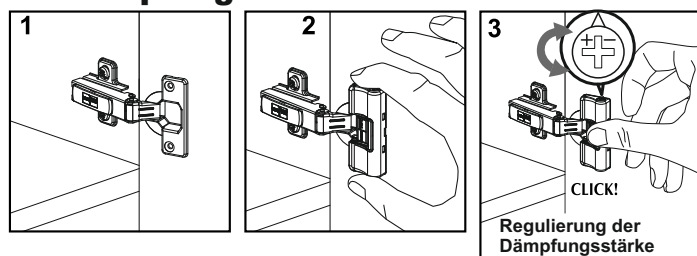

Türen einstellen (Scharniere justieren)  
 Adjusting the doors (adjusting the hinges)  
 Régler les portes (ajuster les charnières)  
 Sistemare le porte (regolare le cerniere)  
 Deuren instellen (scharnieren afstellen)  
 Nastawić drzwi (wyregulować zawiasy)  
 Vyrovnajte dvířka (seříd'te závěsy)  
 Nastavenie dverí (nastavenie závesov)  
 Állítsa be az ajtókat (állítsa be a zsanérokot)  
 Reglare ușii (ajustare balamale)  
 Kapıların ayarlanması (menteselerin seviye ayarı)  
 Регулировка дверей (регулировка шарнира)

