

Das Lowboard kann spiegelbildlich montiert werden.
Diese Anleitung zeigt die Ausführung mit der Klappe auf der linken Seite.

0772-LB_021 GL

Lowboard










REPC-Nr.:

**Service • Assistenza • Dienstverlening • Serwis
Servis • Szerviz • Сервисная служба**

			Colli 1/3 : (8) (9) (10) (11) (12) (13) (14) (15) (16) (17) (18) Colli 2/3 : (1) (2) (3) (4) (5) (6) (7) Beutel 1/5, 2/5, 3/5, 4/5, 5/5 Colli 3/3 : (19)		

CHICAGO









Beutel 1/5

1-10 2x	 6,3x50	1-30 32x	 3x16	1-70 4x	 3x30	1-80 8x	 3,5x13	1-90 8x	 3,5x20	1-200 16x	 6,3x13
2-08 8x	 h=10mm	2-10 14x	 h=12mm	2-20 22x							


Beutel 2/5

1-123 12x	 4x15	2-173 6x		3-07 1x		3-11 3x		3-41 3x	 0er
--------------	--	-------------	---	------------	---	------------	--	------------	---


Beutel 4/5

2-103 12x	 8x30	5-01 10x		5-130 2x		5-185 8x	
5-260 1x		5-265 1x		5-280 1x		6-425 3x	


Beutel 5/5

1-36 4x	 4x40
------------	--


Colli 1/3










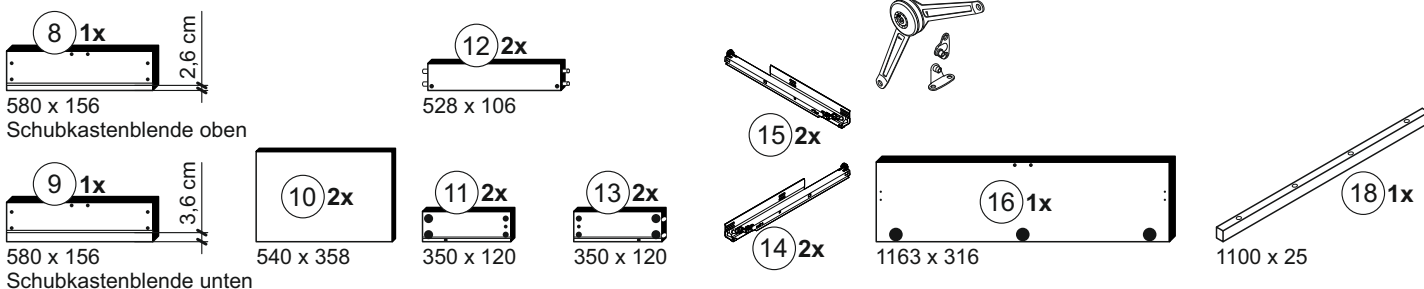


Colli 2/3

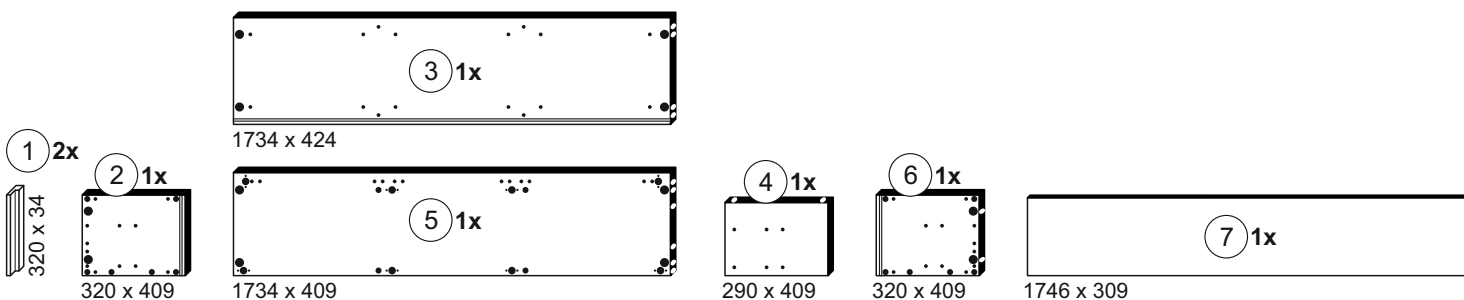

Colli 3/3

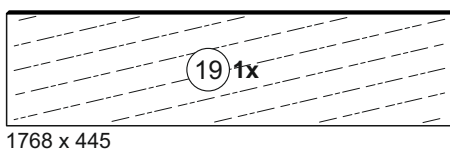

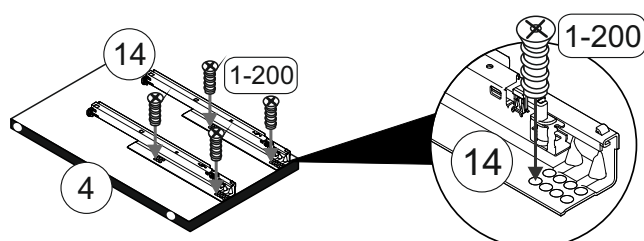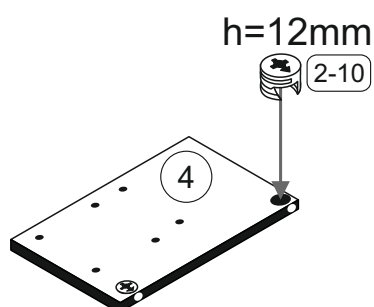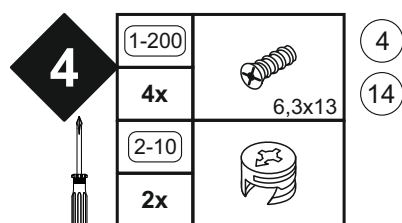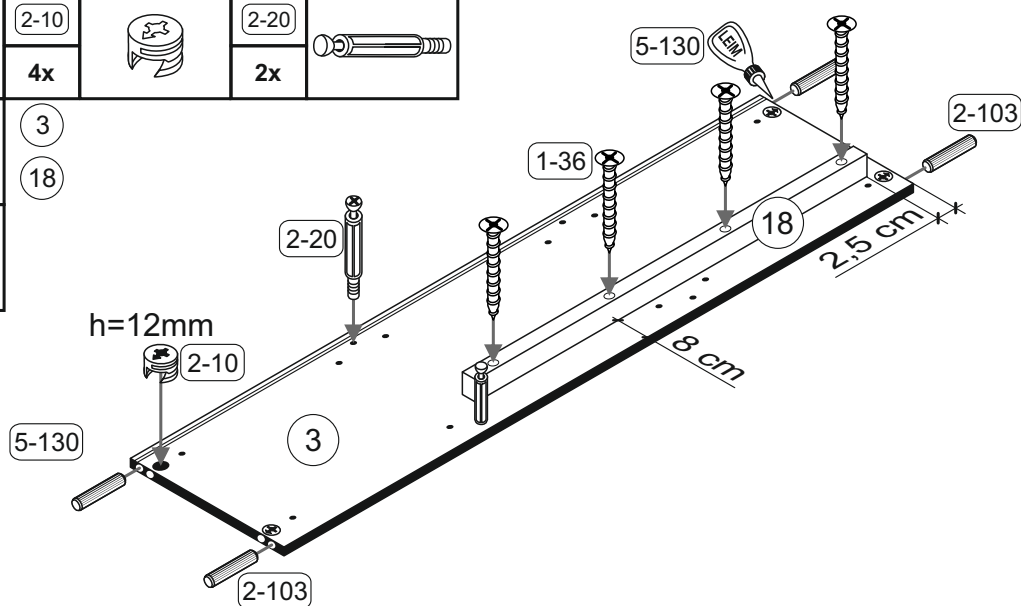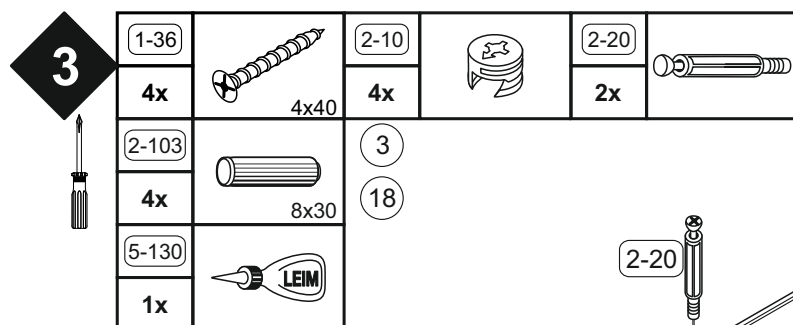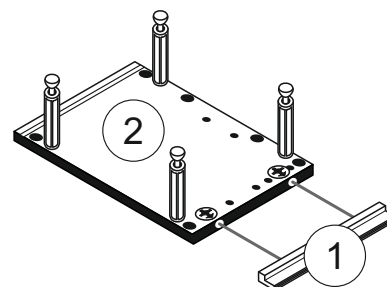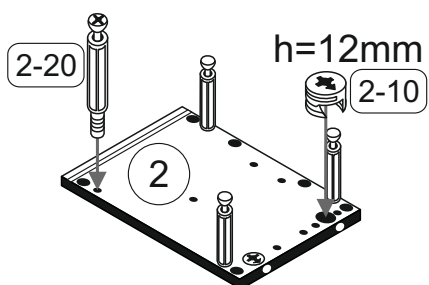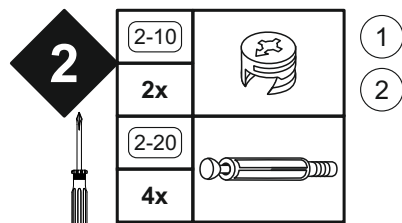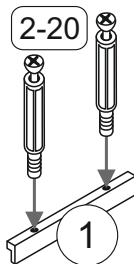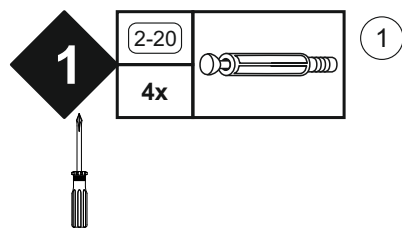

CHICAGO

5

2-10

4x

5-130

1x

2-103

8x

5

8x30

h=12mm

6

1-200

4x

6,3x13

2-10

2x

2-20

4x

1

6

15

h=12mm

7

1-200

4x

6,3x13

2-08

8x

2-20

8x

6-425

2x

8

9

11

13




2,6 cm

3,6 cm

h=10mm

**Schubkastenblende
oben**

**Schubkastenblende
unten**

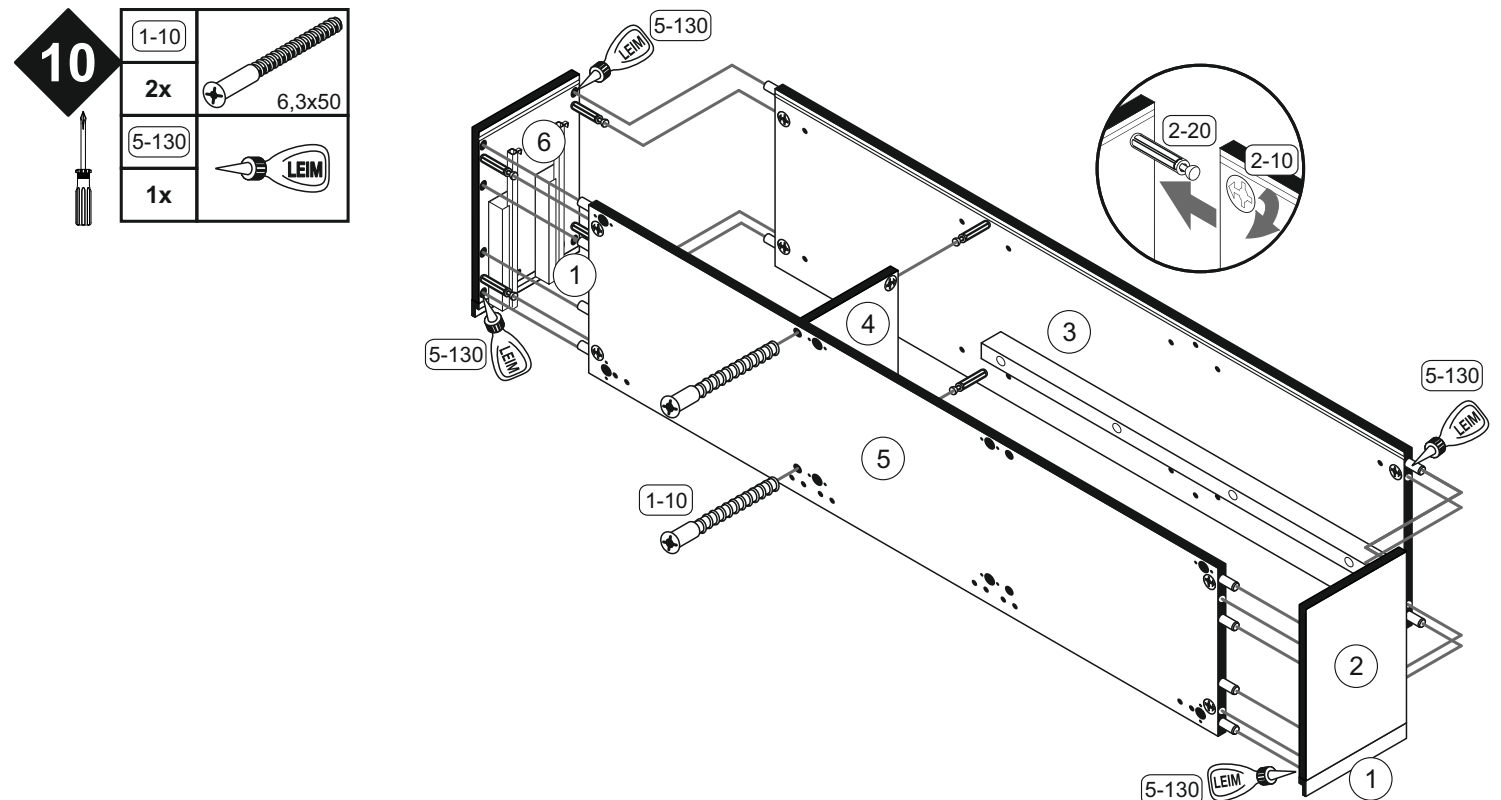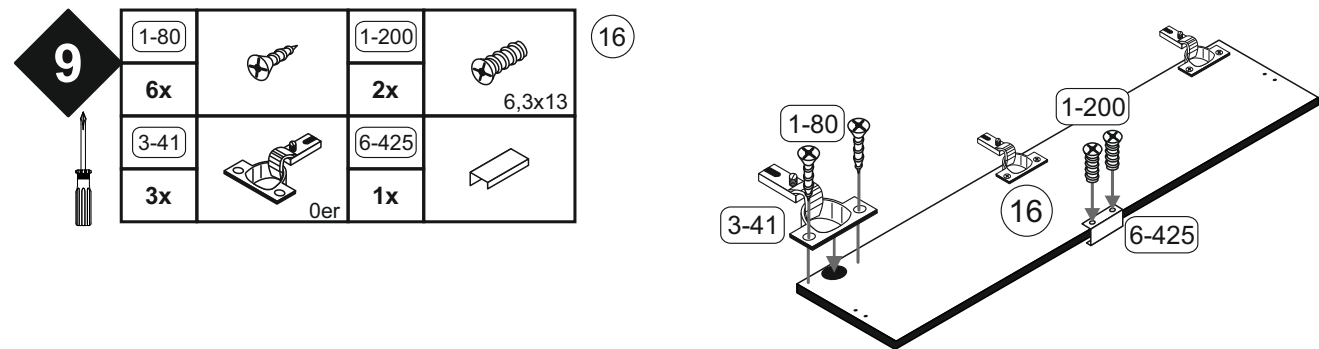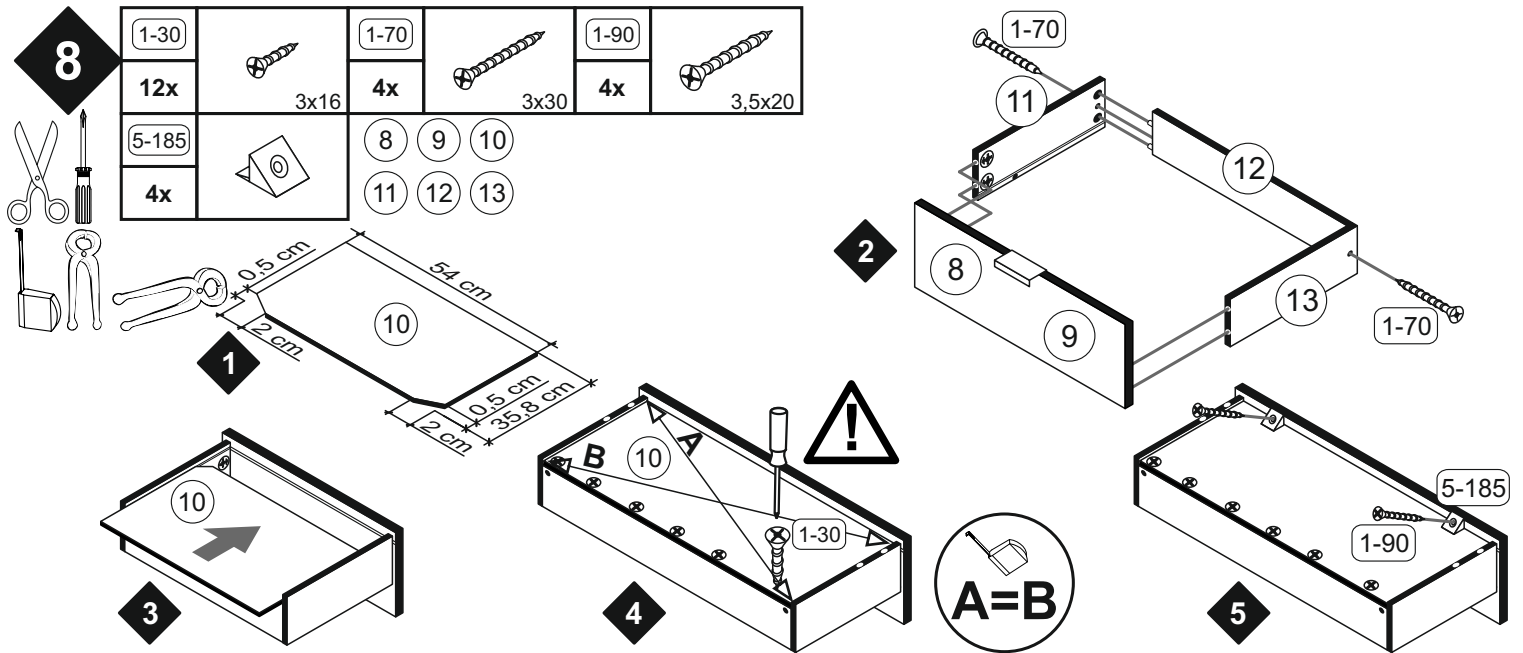

CHICAGO

11


1-30	
20x	3x16
1-90	
4x	3,5x20
1-123	
12x	4x15
5-185	
4x	
2-173	
6x	


12

5-01		5-280	
10x		1x	


Höhenverstellung der Möbelfüße

13





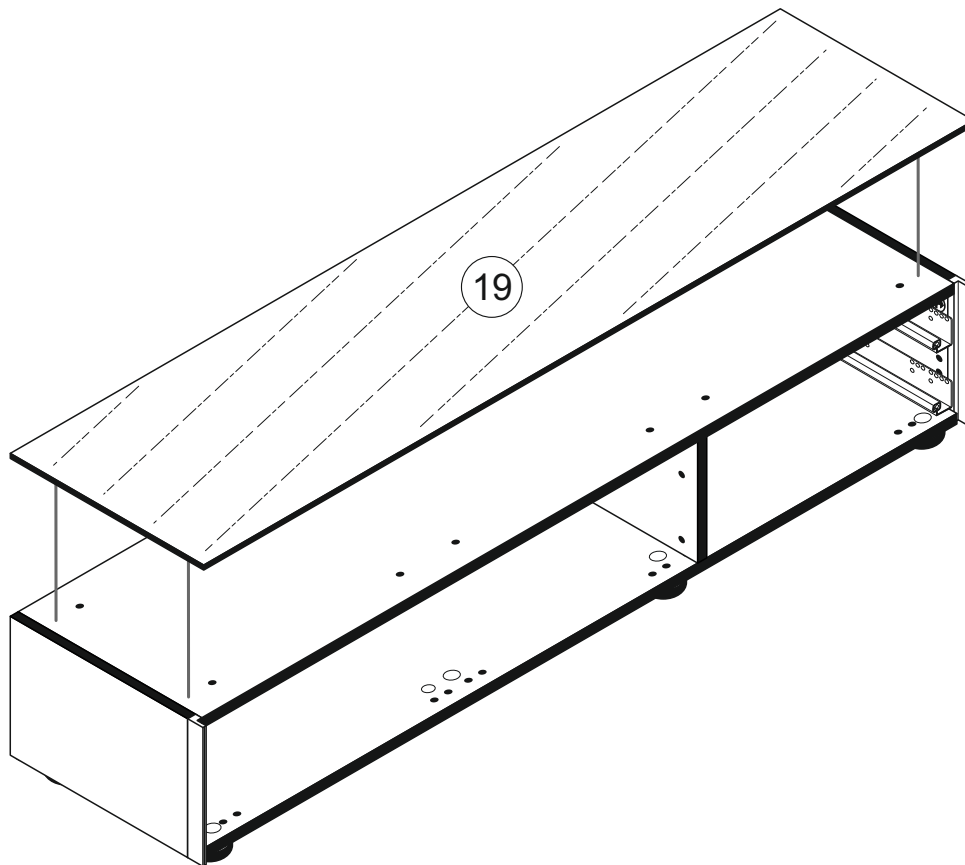


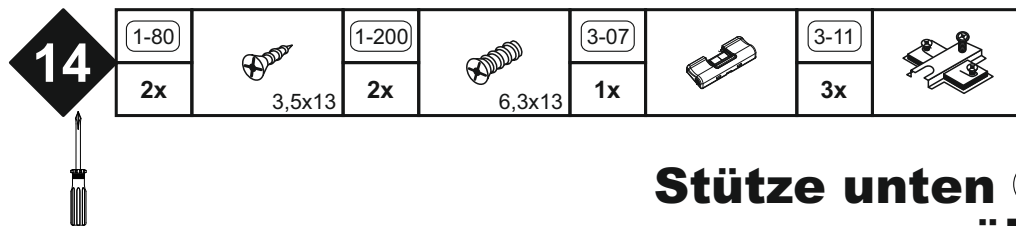

Stütze unten ¹⁷ überdrehen

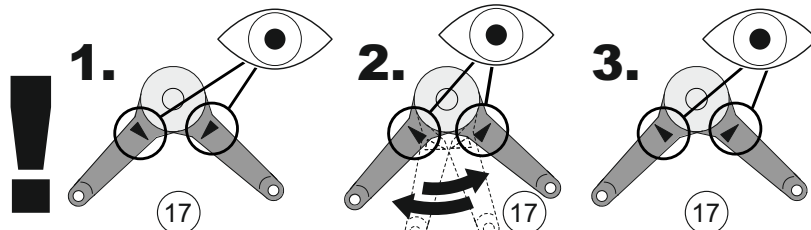

Montage der Türdämpfung

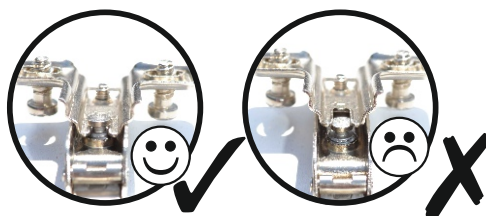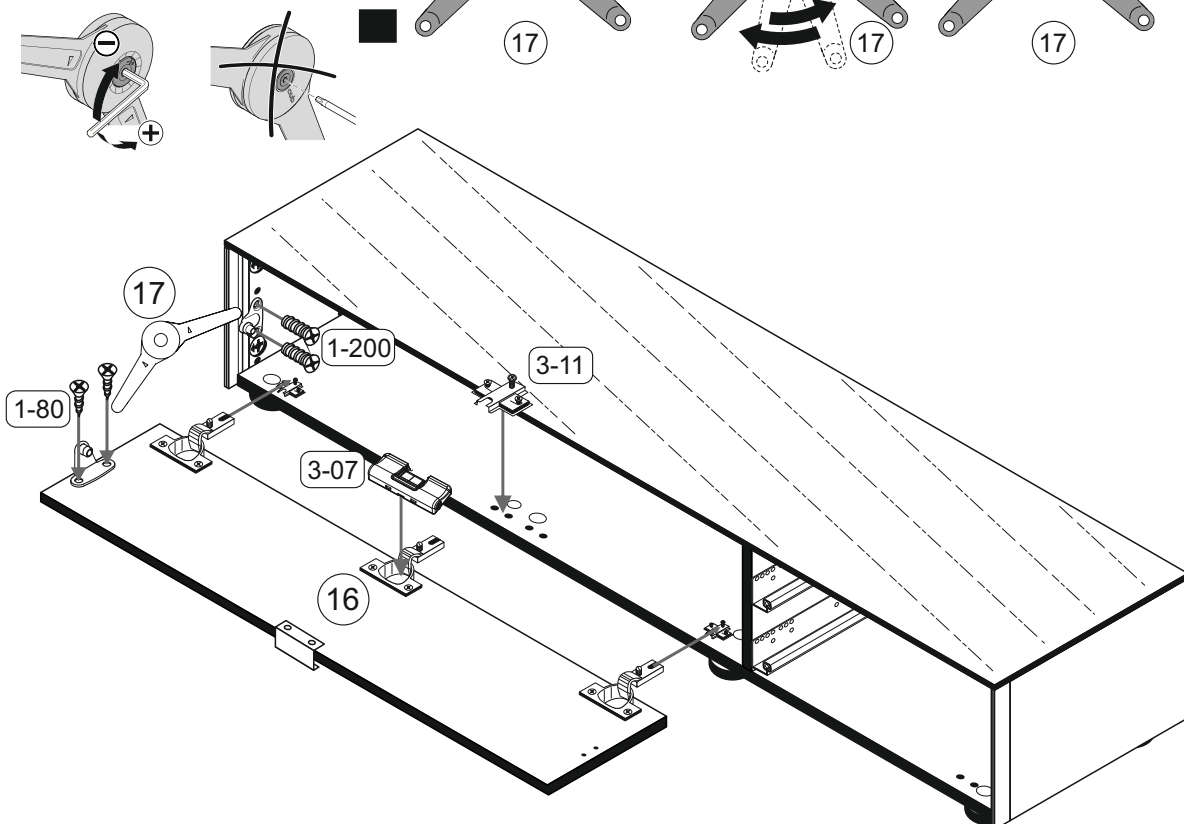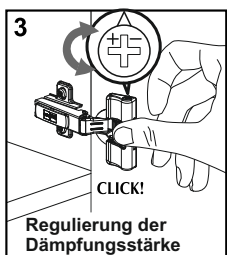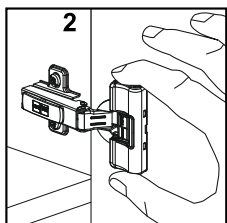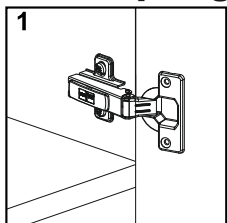

Türen einstellen (Scharniere justieren)

Adjusting the doors (adjusting the hinges)

Régler les portes (ajuster les charnières)

Sistemare le porte (regolare le cerniere)

Deuren instellen (scharnieren afstellen)

Nastawić drzwi (wyregulować zawiasy)

Vyrovnejte dvířka (seřid'te závěsy)


Nastavenie dverí (nastavenie závesov)


Állítsa be az ajtókat (állítsa be a zsanérokot)

Reglare uși (ajustare balamale)


Kapıların ayarlanması (menteselerin seviye ayarı)

Регулировка дверей (регулировка шарнира)

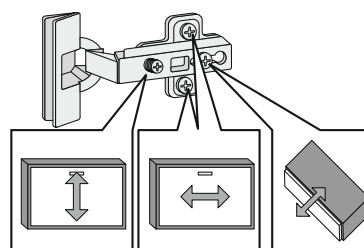


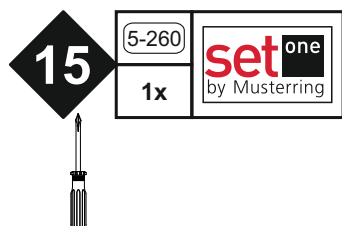



Einbau des Schubkastens

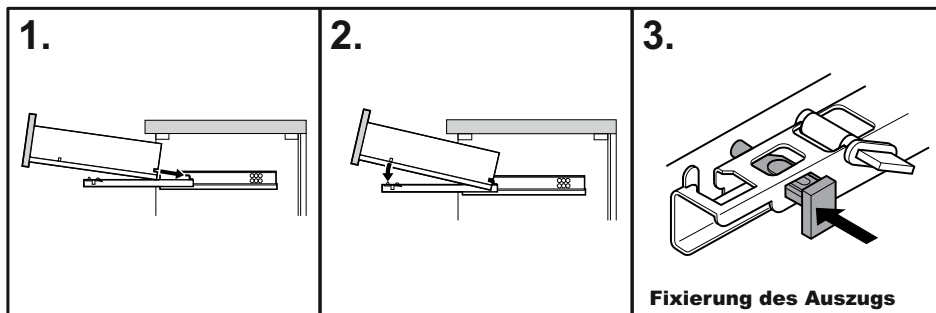

Ausbau des Schubkastens

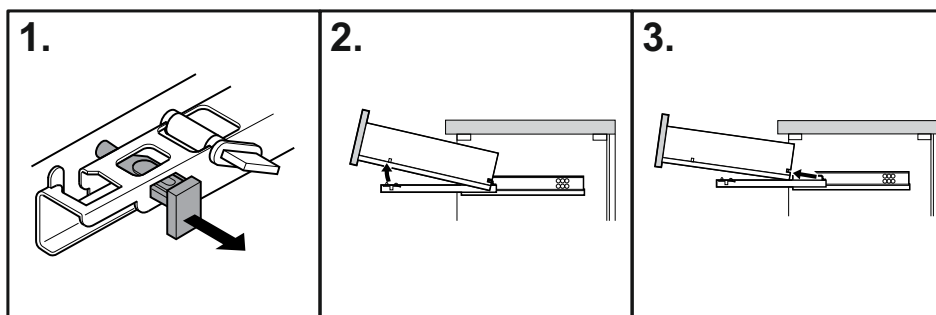

Höhenverstellung des Schubkastens

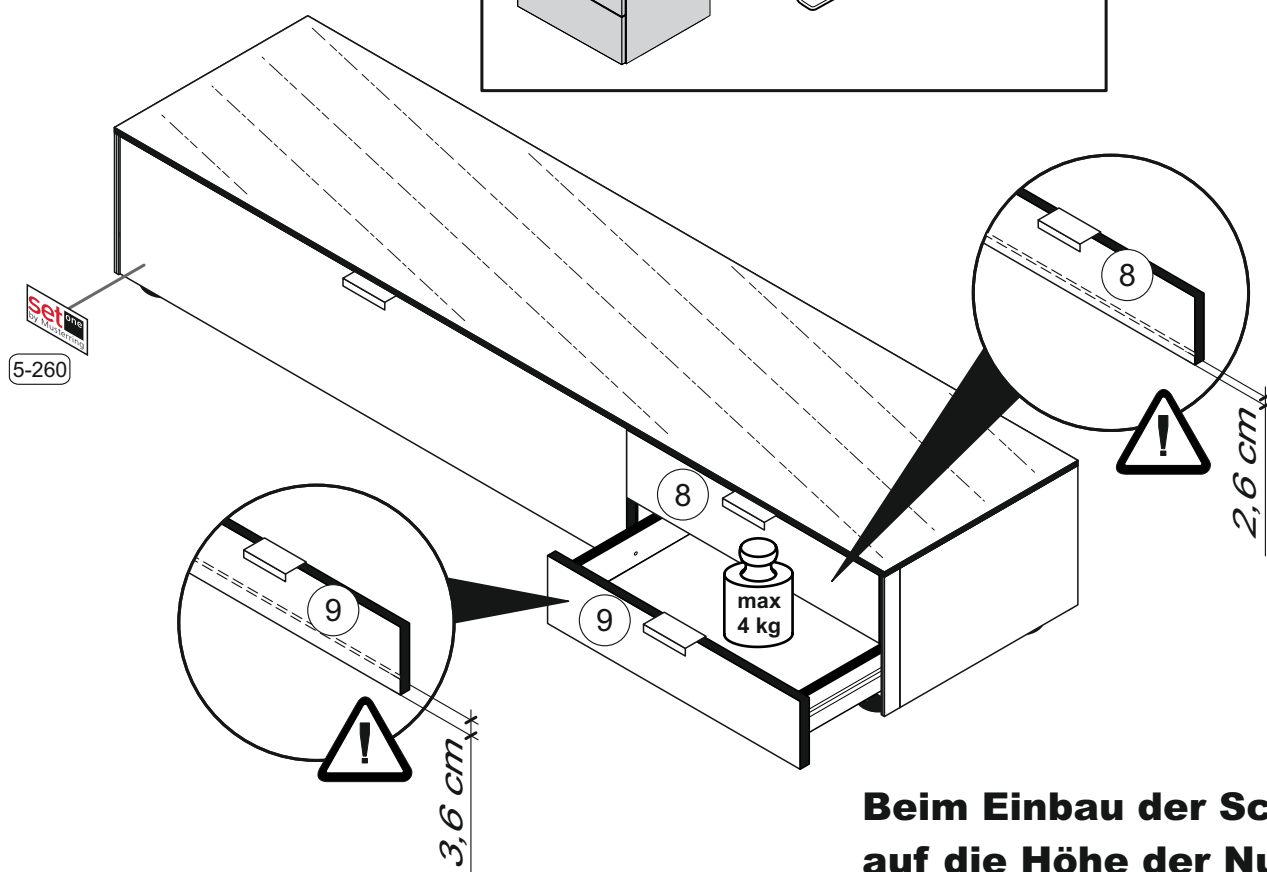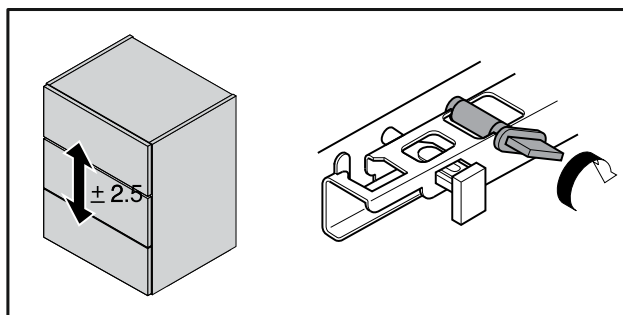

**Beim Einbau der Schubkästen
 auf die Höhe der Nut achten.**