








Das Lowboard kann spiegelbildlich montiert werden.  
Diese Anleitung zeigt die Ausführung mit der Klappe auf der rechten Seite.

# 0772-LB\_021 GL

## Lowboard

REPC-Nr.:

**Service • Assistenza • Dienstverlening • Serwis  
Servis • Szerviz • Сервисная служба**

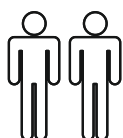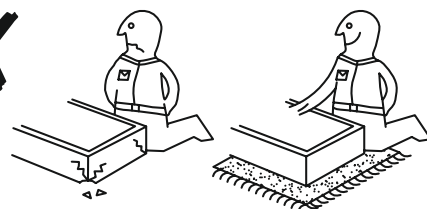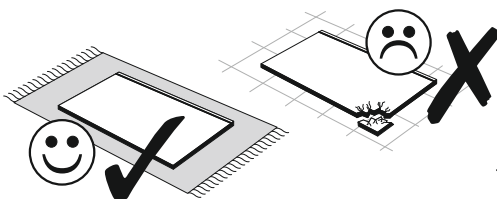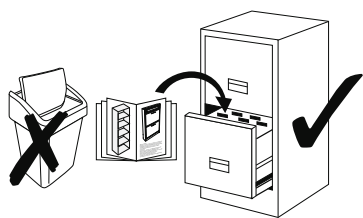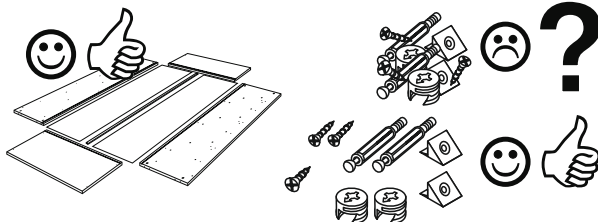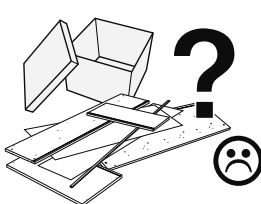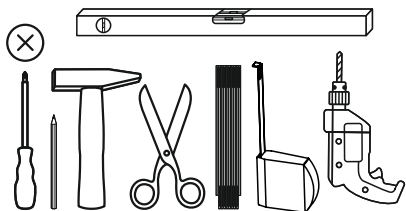










Colli 1/3 : 8 9 10 11 12 13 14 15 16 17 18

Colli 2/3 : 1 2 3 4 5 6 7 Beutel 1/5, 2/5, 3/5, 4/5, 5/5



Colli 3/3 : 19

# CHICAGO









## Beutel 1/5

1-10 2x	 6,3x50	1-30 32x	 3x16	1-70 4x	 3x30	1-80 8x	 3,5x13	1-90 8x	 3,5x20	1-200 16x	 6,3x13
2-08 8x	 h=10mm	2-10 14x	 h=12mm	2-20 22x							


## Beutel 2/5

1-123 12x	 4x15	2-173 6x		3-07 1x		3-11 3x		3-41 3x	 0er
--------------	--	-------------	---	------------	---	------------	--	------------	---


## Beutel 4/5

2-103 12x	 8x30	5-01 10x		5-130 2x		5-185 8x	
5-260 1x		5-265 1x		5-280 1x		6-425 3x	


## Beutel 5/5

1-36 4x	 4x40
------------	--


## Colli 1/3






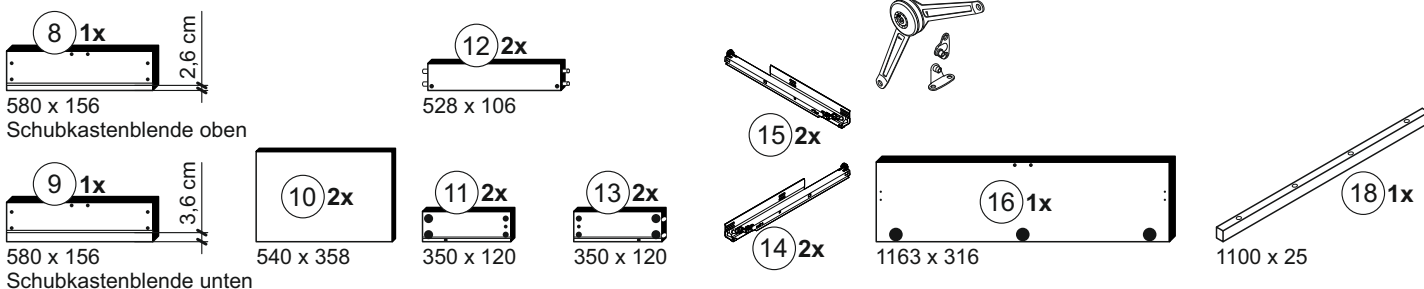


## Colli 2/3

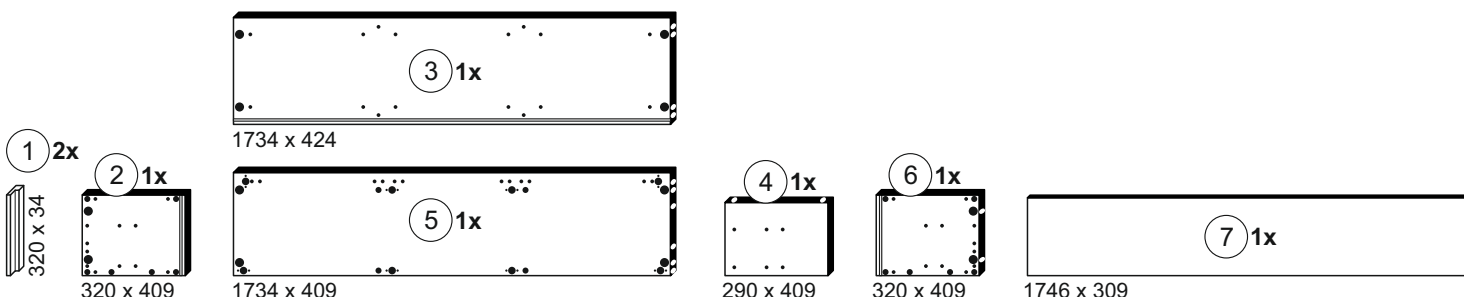

## Colli 3/3

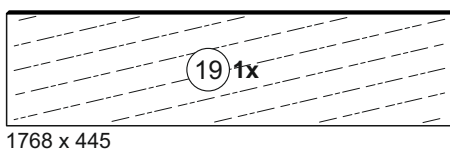

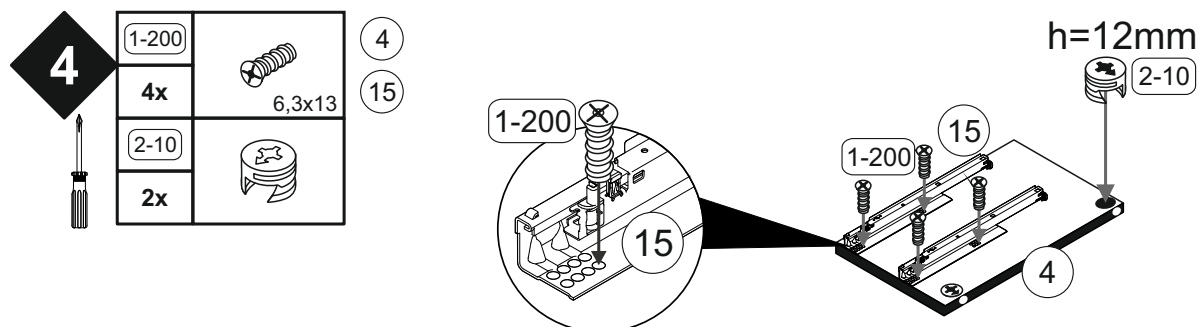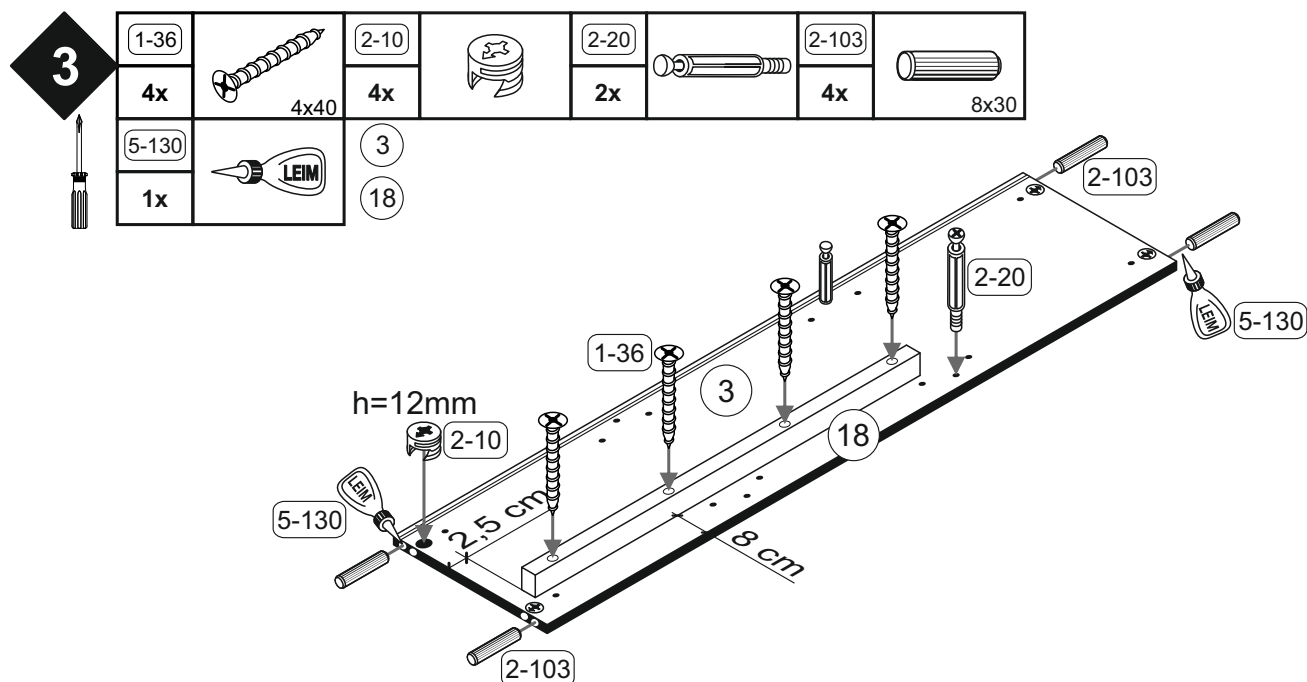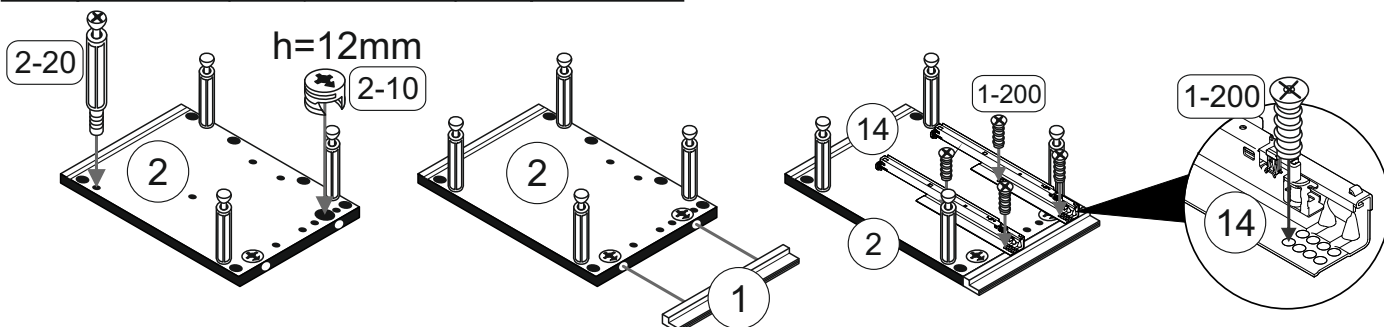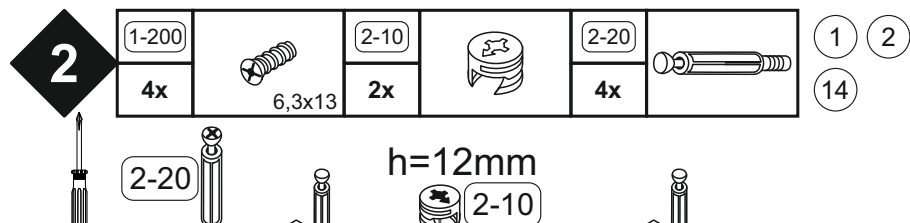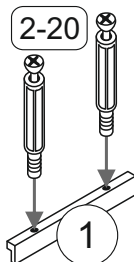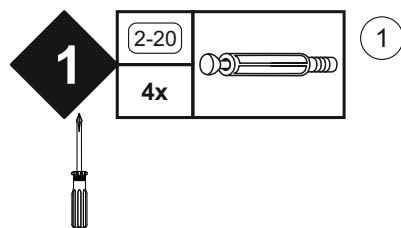

# CHICAGO

5

2-10

4x

5-130



1x

2-103

8x

5

8x30

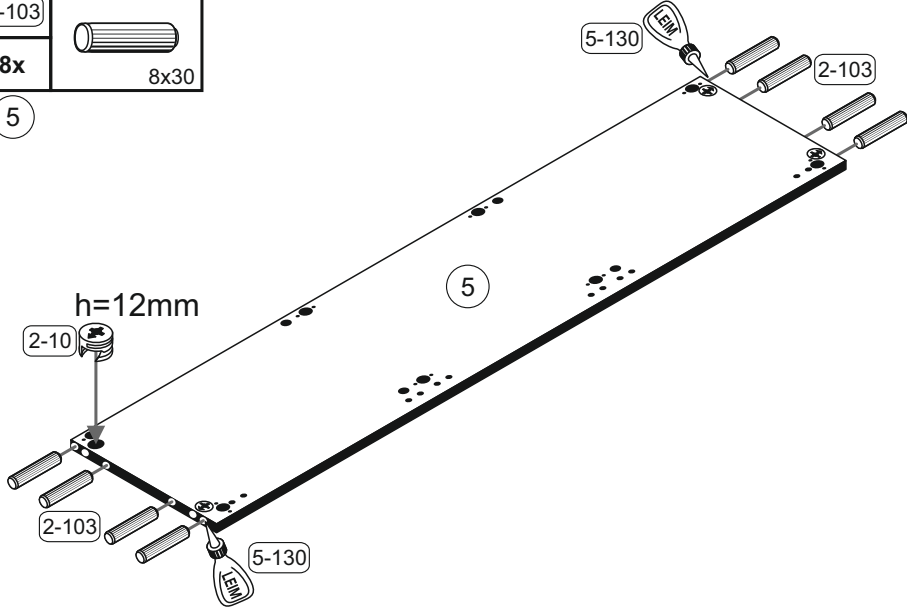

6

2-10

2x

2-20

4x



1

6

h=12mm

2-10

2-20

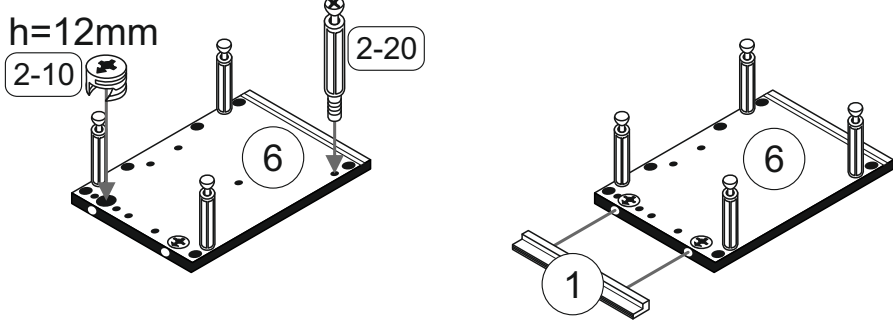

7

1-200

4x

6,3x13

2-08

8x

2-20

8x

6-425

2x

8

9

11

13

1-200

2-20

2,6 cm

3,6 cm

!

!

Schubkastenblende oben

Schubkastenblende unten



2-08




h=10mm

2-08



11

13

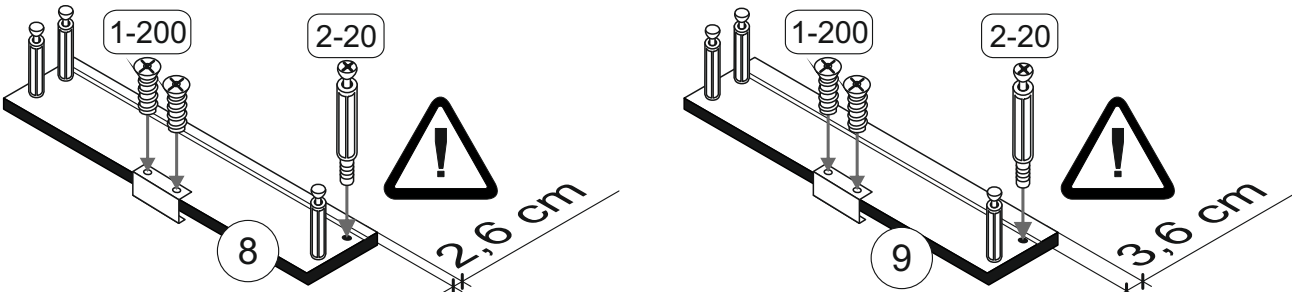


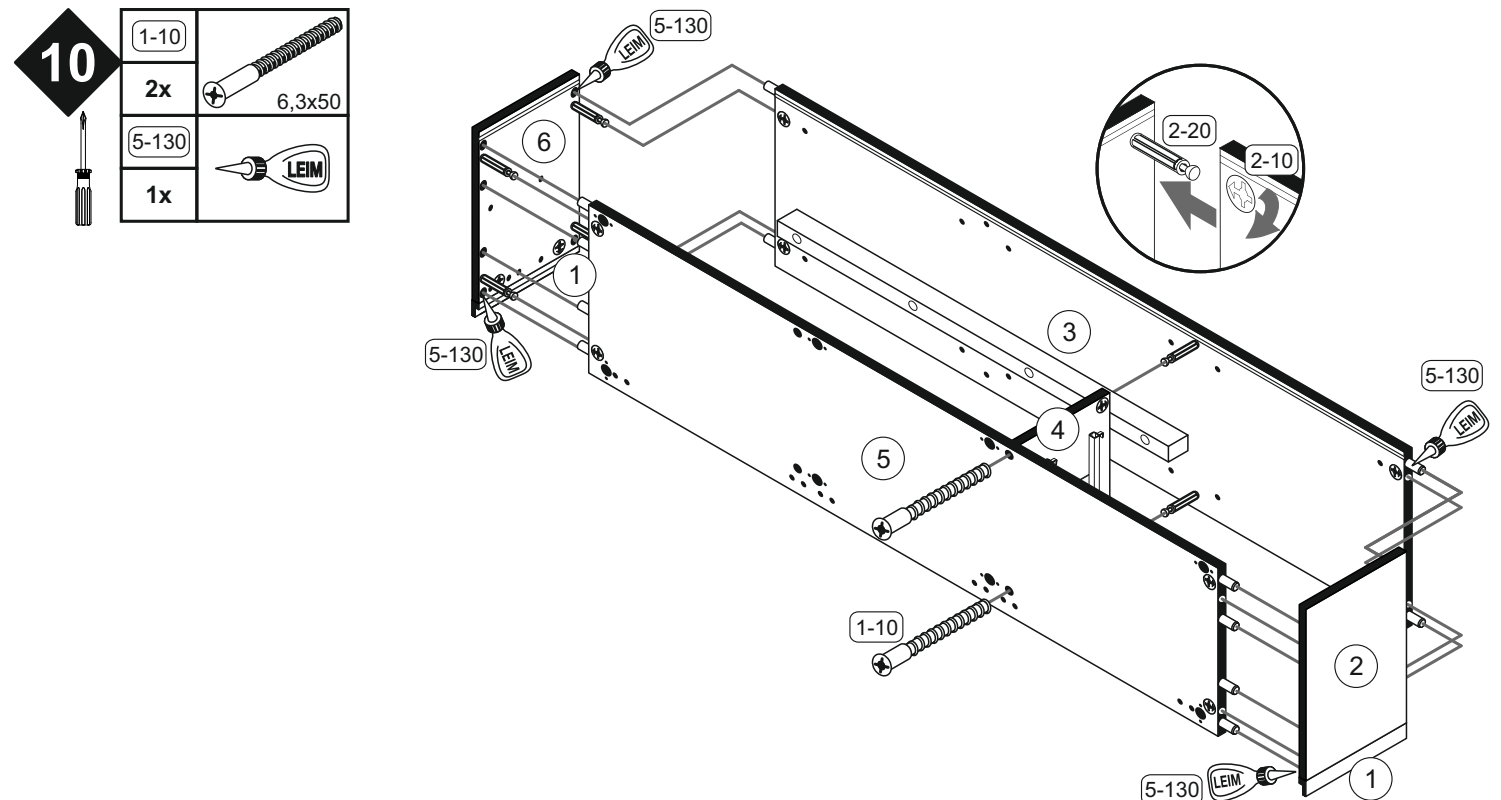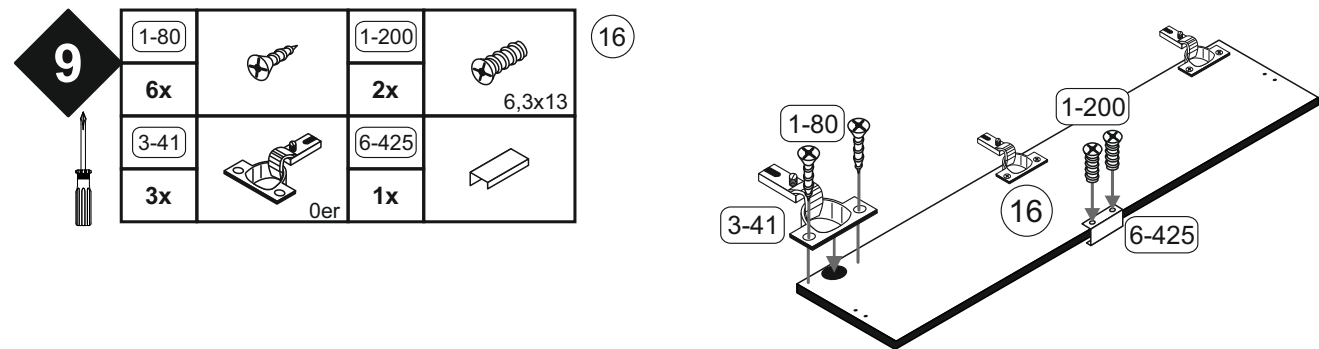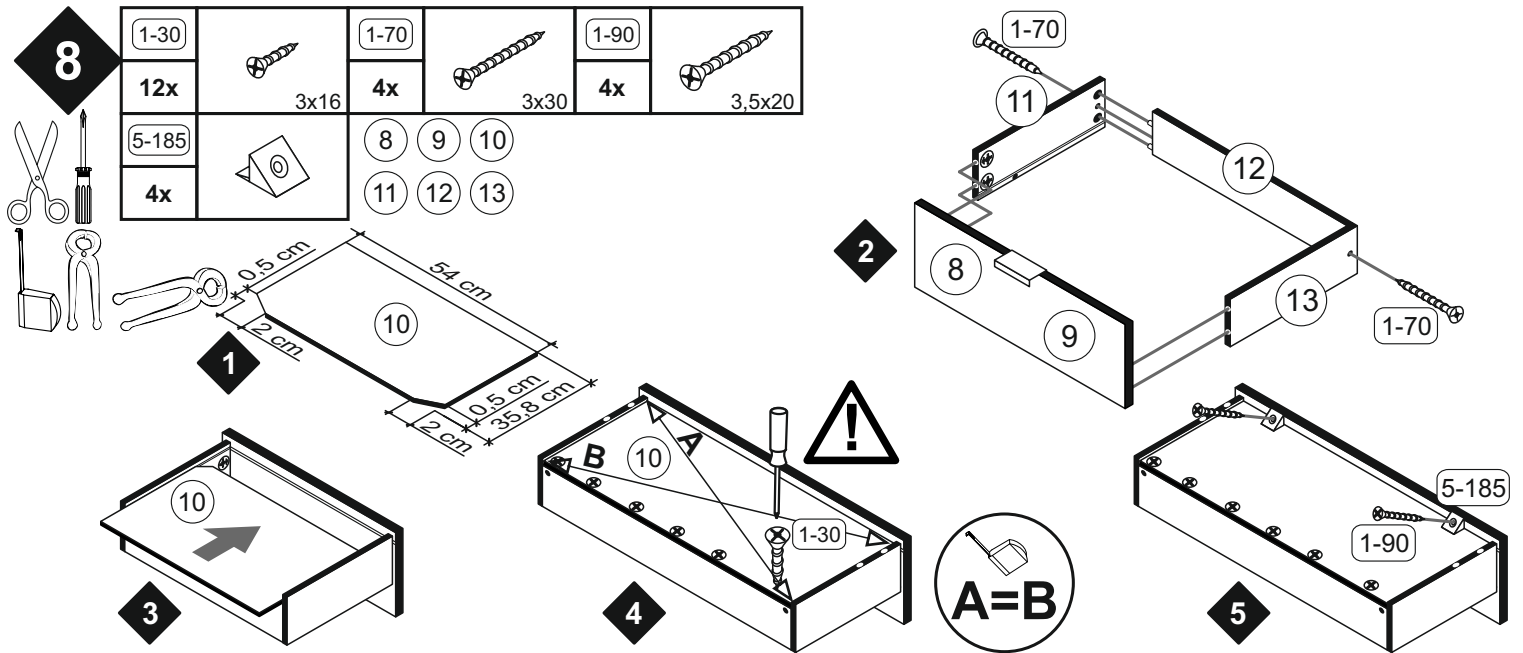

# CHICAGO

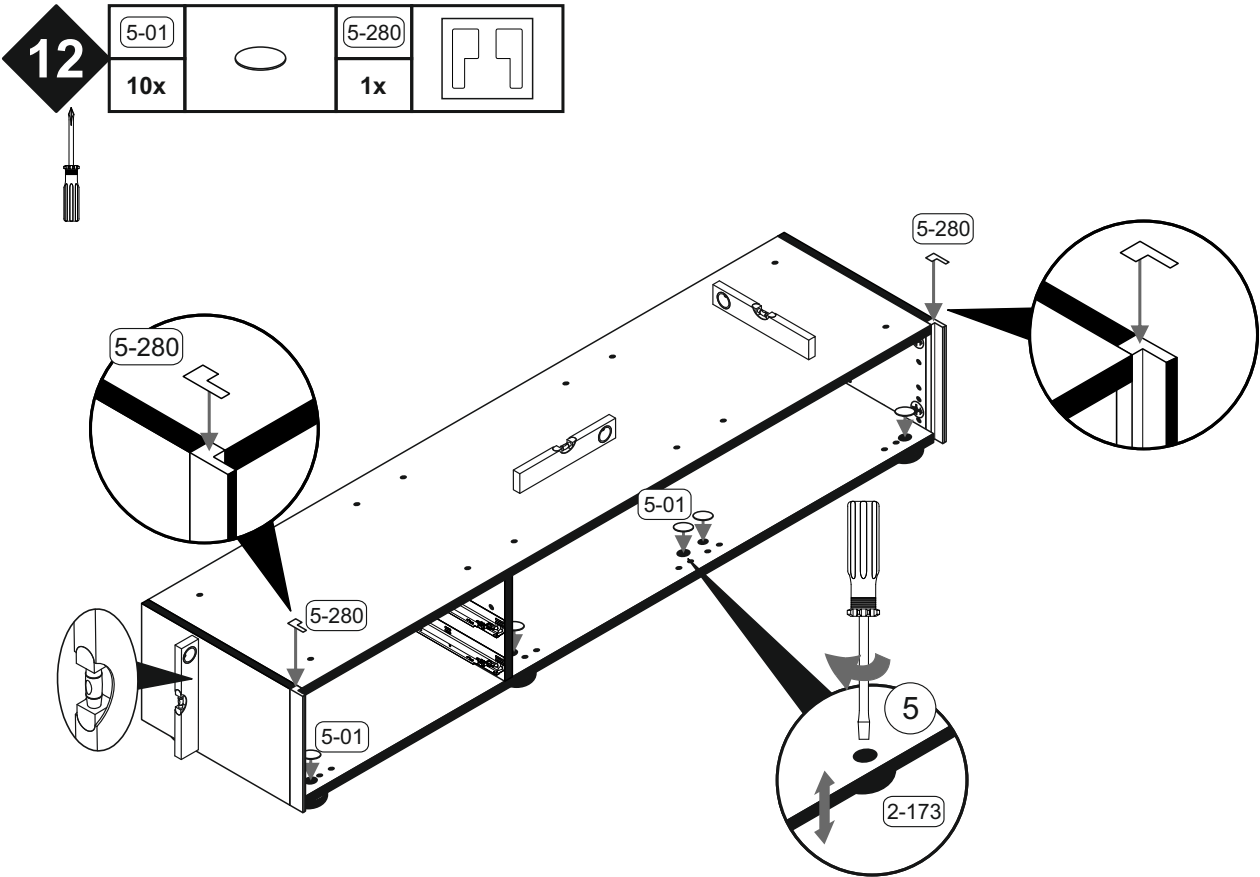
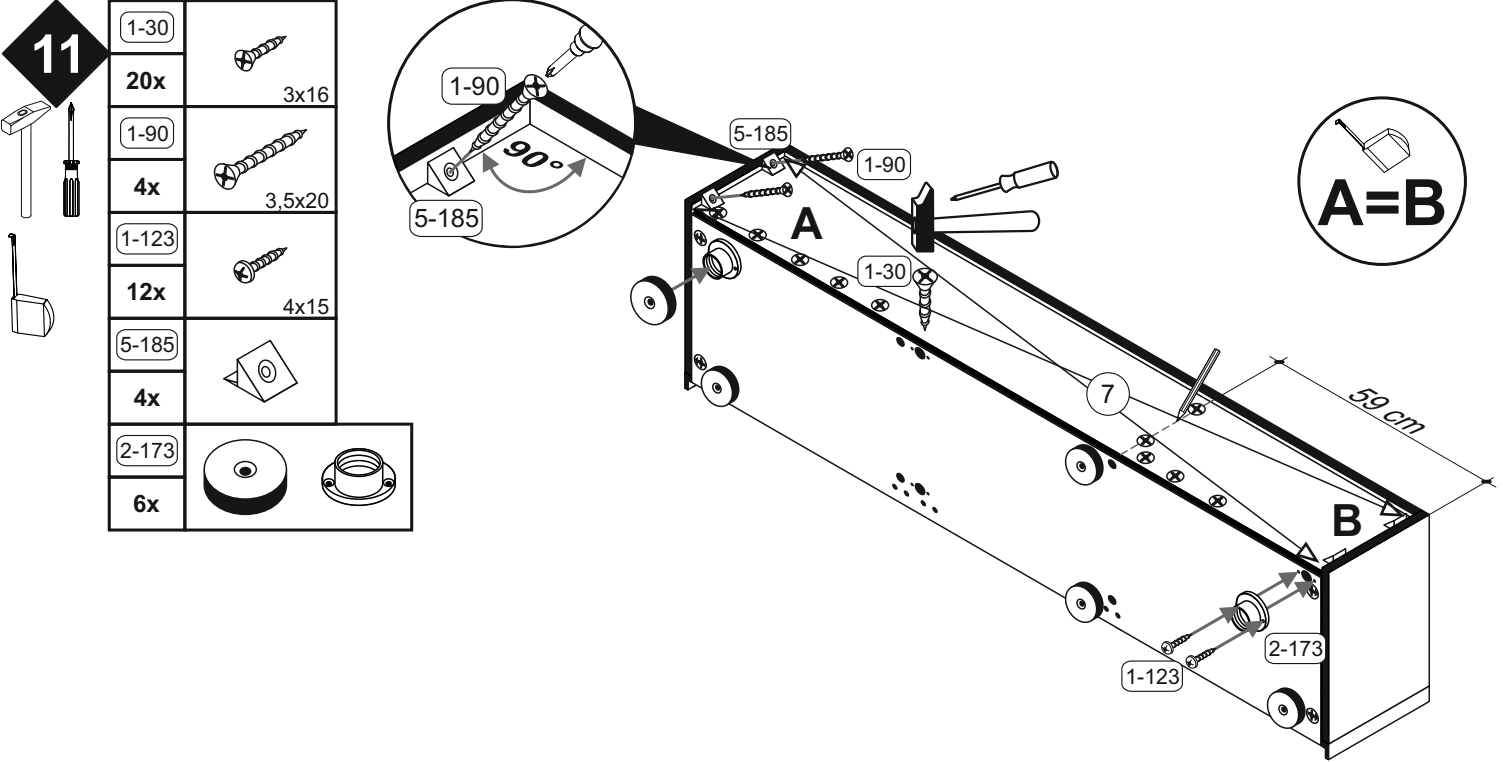


13




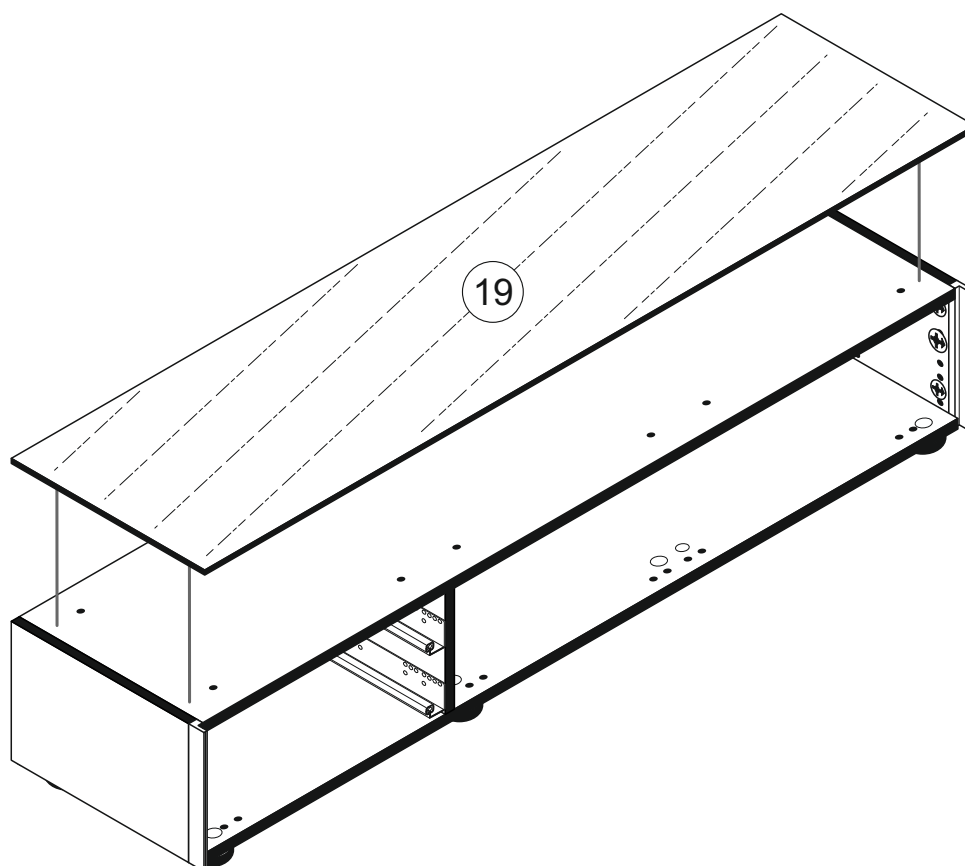


14	1-80		1-200		3-07		3-11
	2x	3,5x13	2x	6,3x13	1x		3x


## Stütze unten (17) überdrehen

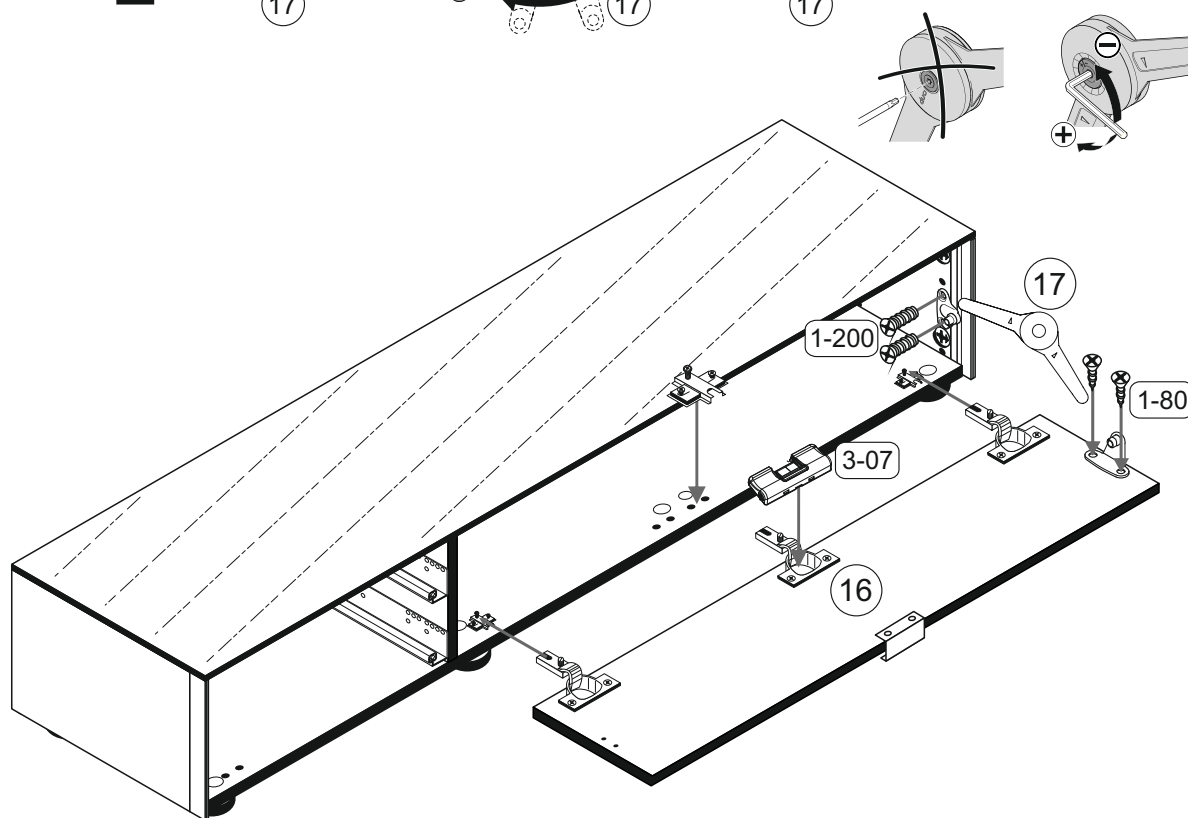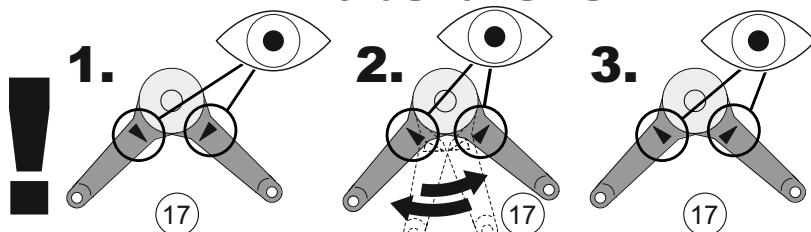


## Montage der Türdämpfung

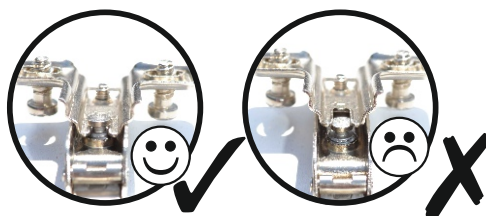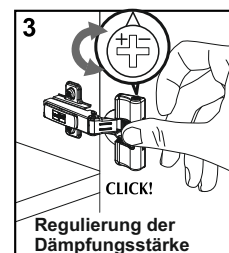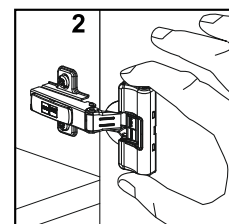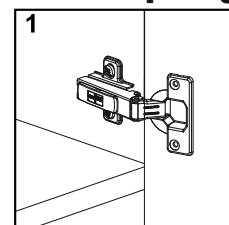


Türen einstellen (Scharniere justieren)  
 Adjusting the doors (adjusting the hinges)  
 Régler les portes (ajuster les charnières)  
 Sistemare le porte (regolare le cerniere)  
 Deuren instellen (scharnieren afstellen)  
 Nastawić drzwi (wyregulować zawiasy)  
 Vyrovnajte dviřka (seřid'te závěsy)  
 Nastavenie dverí (nastavenie závesov)  
 Állítsa be az ajtókat (állítsa be a zsanérokot)  
 Reglare ușii (ajustare balamale)  
 Kapıların ayarlanması (menteselerin seviye ayarı)  
 Регулировка дверей (регулировка шарнира)

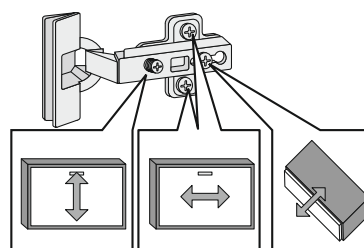




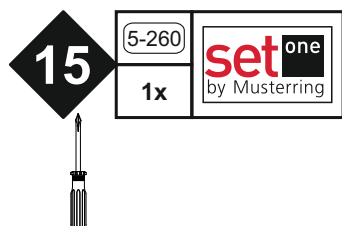



### Einbau des Schubkastens

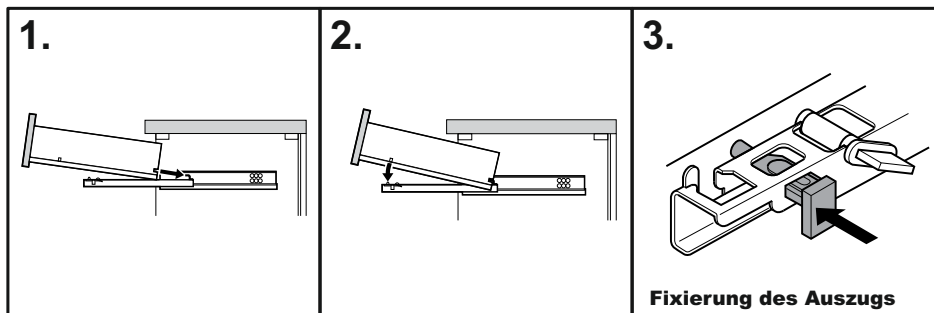

### Ausbau des Schubkastens

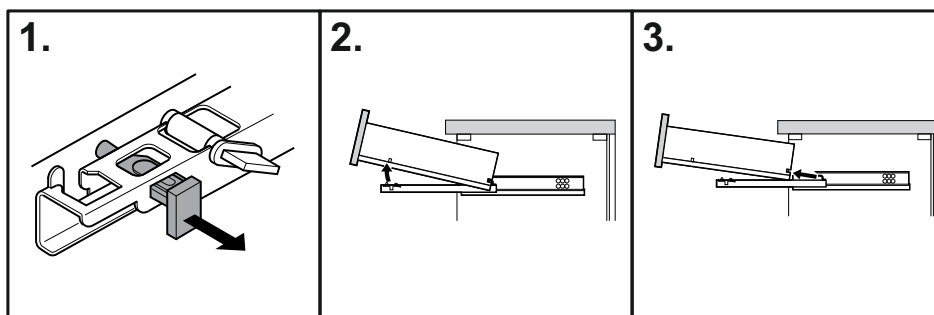

### Höhenverstellung des Schubkastens

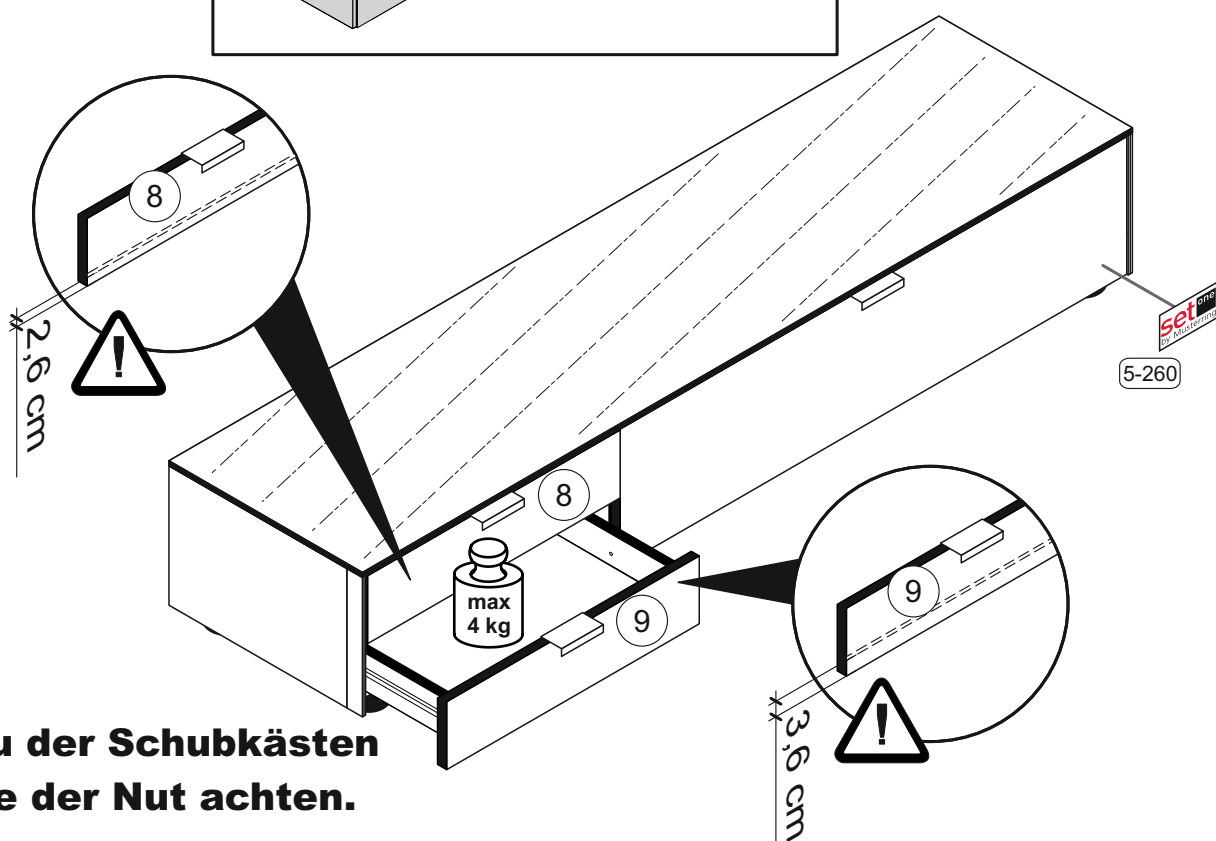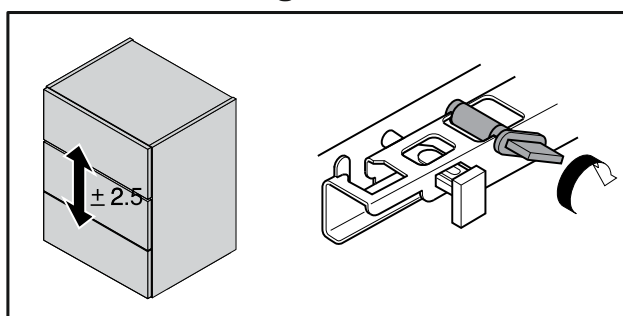

**Beim Einbau der Schubkästen  
 auf die Höhe der Nut achten.**