

Das Lowboard kann spiegelbildlich montiert werden.  
Diese Anleitung zeigt die Ausführung mit der Tür auf der rechten Seite.

# 0772-LB\_111 GL

## Lowboard












REPC-Nr.:

Service • Assistenza • Dienstverlening • Servis  
Servis • Szerviz • Сервисная служба







			<p>Colli 1/3 : (13) (14) (15) (16) (17) (18) (19) (20) (21) (22) (23) (24)</p> <p>Colli 2/3 : (1) (2) (3) (4) (5) (6) (7) (8) (9) (10) (11) (12) Beutel 1/5, 2/5, 3/5, 4/5, 5/5</p> <p>Colli 3/3 : (25)</p>		

# CHICAGO









## Beutel 1/5

1-10 2x	 6,3x50	1-30 45x	 3x16	1-70 2x	 3x30	1-80 12x	 3,5x13	1-90 4x	 3,5x20	1-122 2x	 4x13
1-200 12x	 6,3x13	2-08 4x	 h=10mm	2-10 18x	 h=12mm	2-20 22x		2-160 4x			


## Beutel 2/5


1-123 12x	 4x15	2-173 6x	 	3-07 2x		3-11 5x		3-42 5x	 8er
--------------	---	-------------	--	------------	---	------------	--	------------	--

## Beutel 4/5


2-103 12x	 8x30	5-01 10x		5-130 2x	 LEIM	5-185 4x	
5-260 1x	 set one by Musterring	5-265 1x	 set one by Musterring Pflegeanweisung	5-280 1x		6-425 3x	

## Beutel 5/5


1-36 4x	 4x40
------------	---




## Colli 1/3




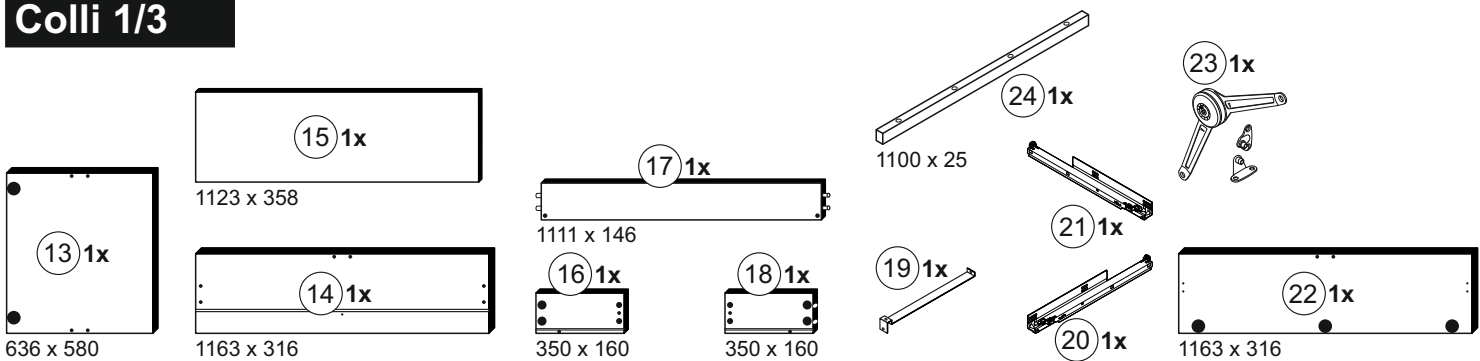


## Colli 2/3

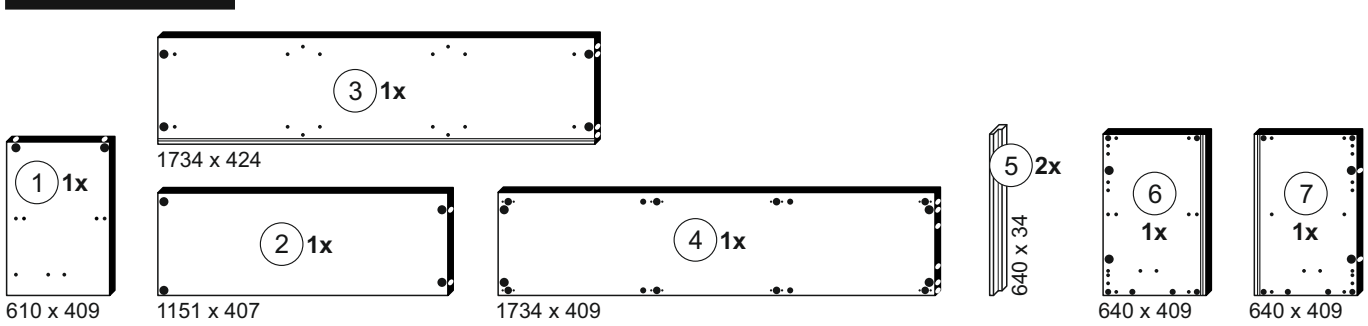

## Colli 3/3

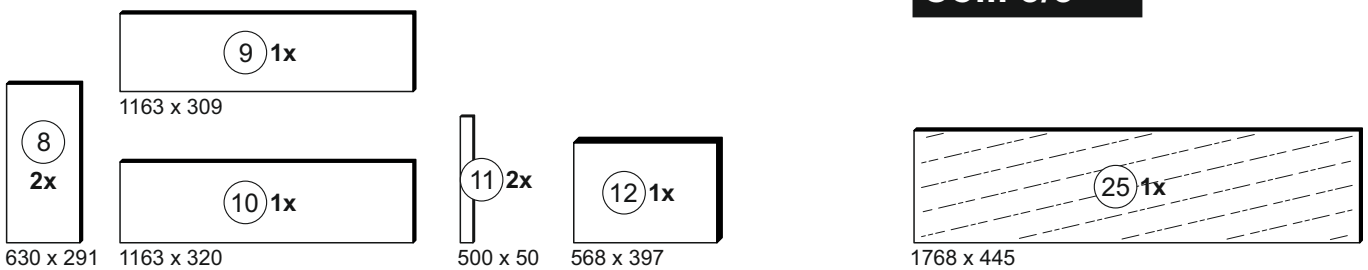

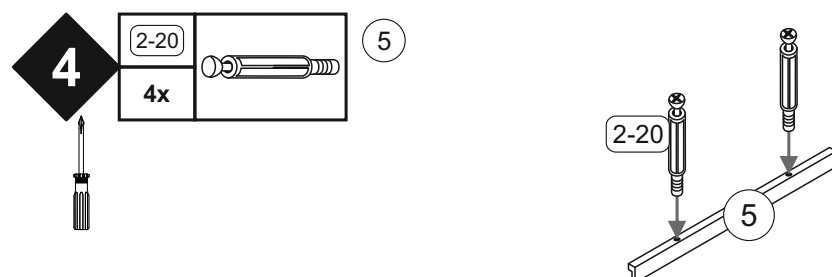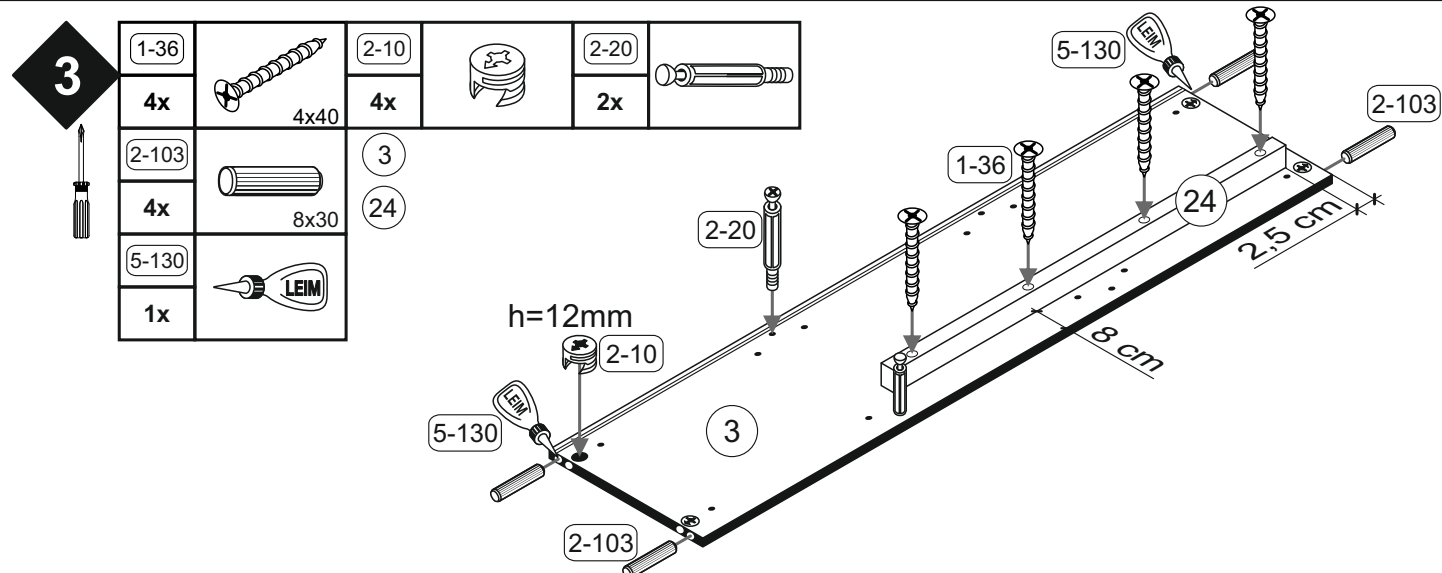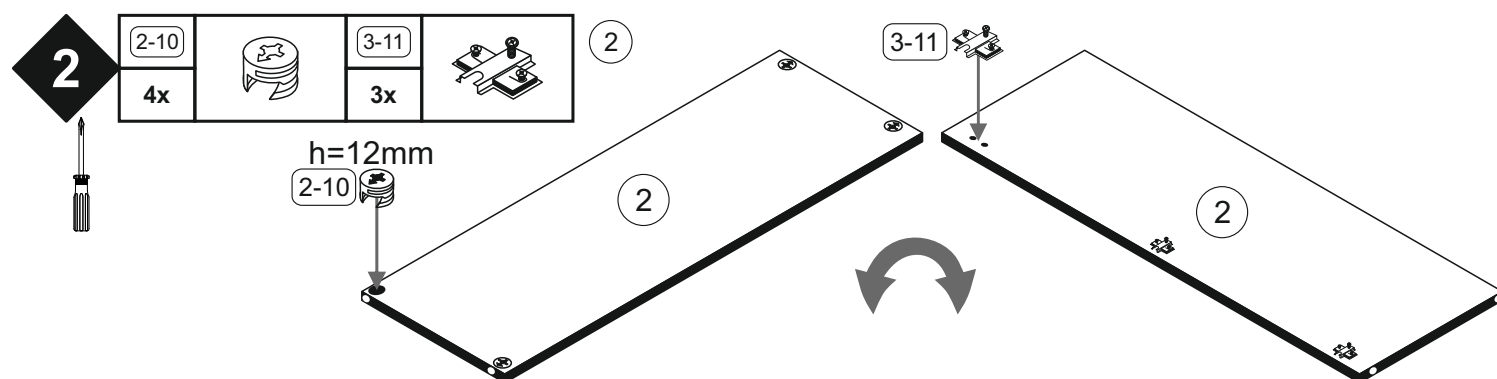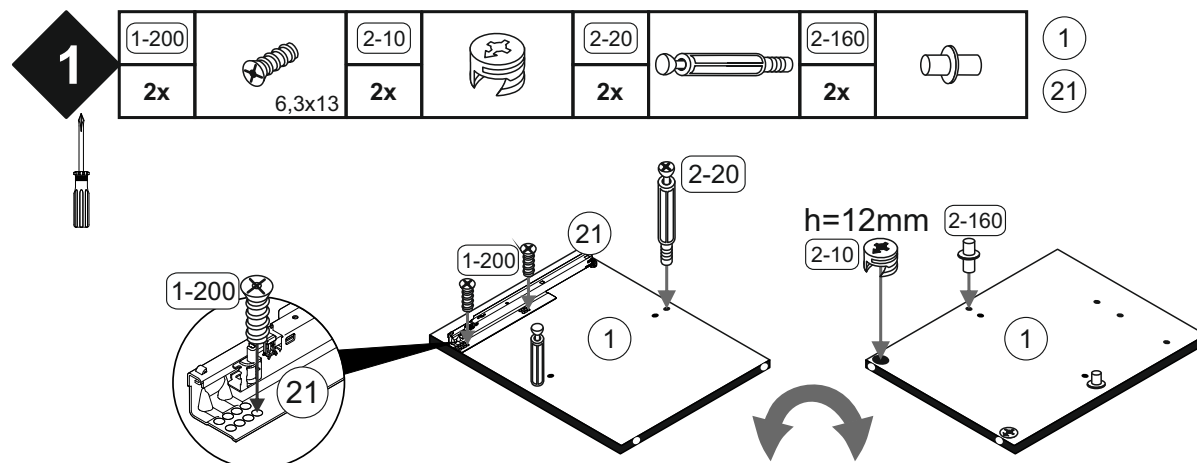

# CHICAGO

5




2-10		2-103	
4x		8x	8x30
5-130		4	
1x			

6

1-200		2-10		2-20	
2x	6,3x13	2x		6x	

7

2-10		2-20		3-11		2-160	
2x		4x		2x		2x	

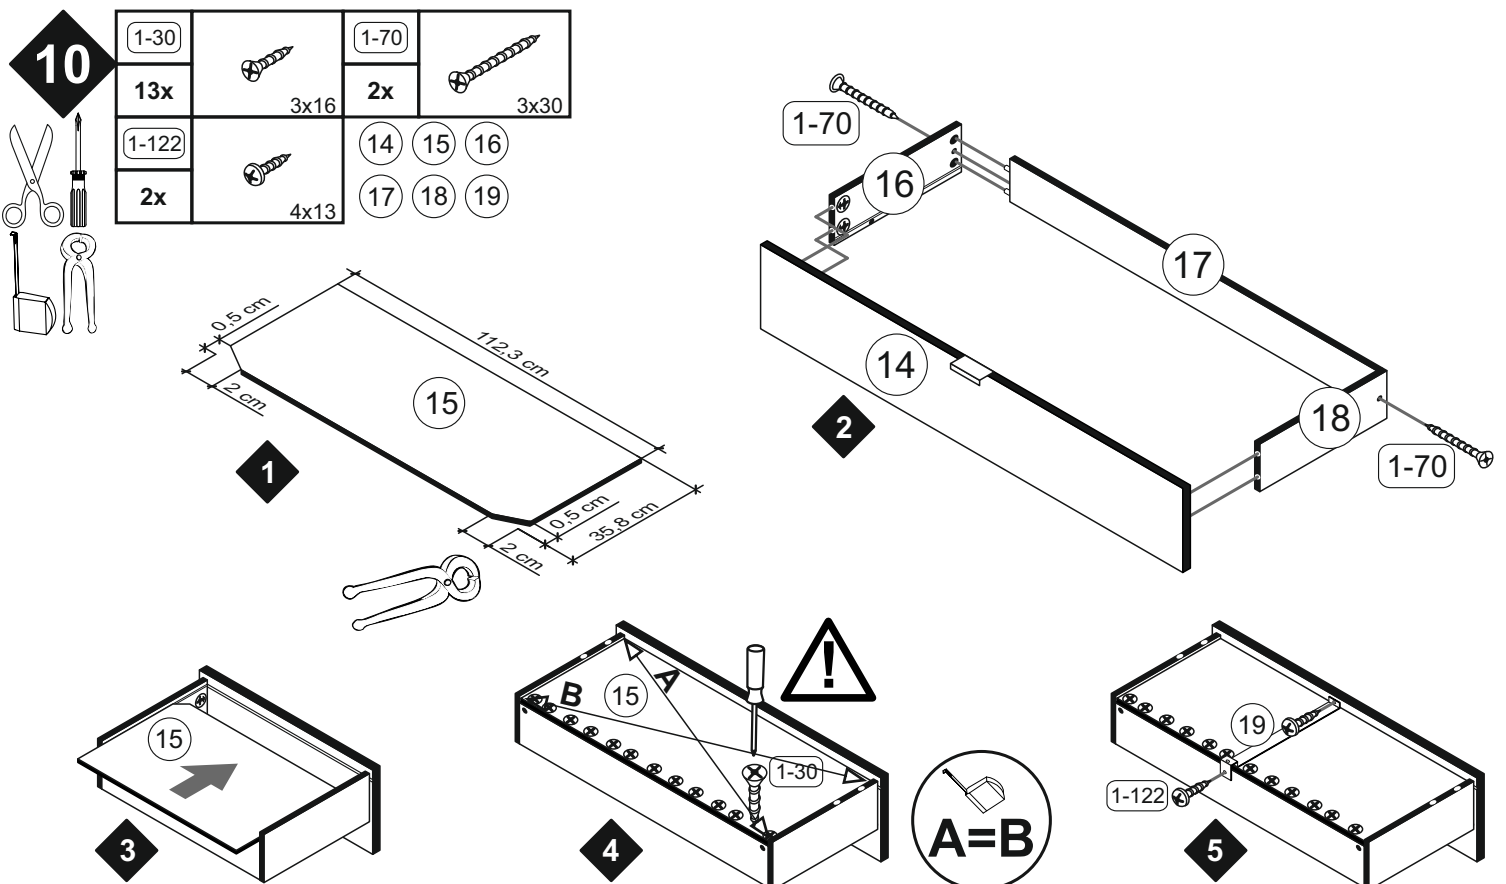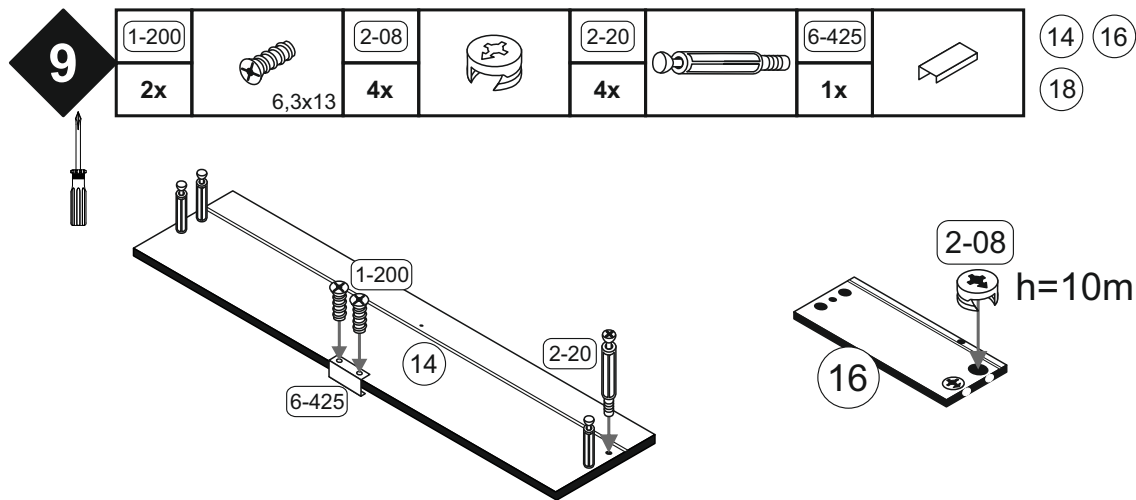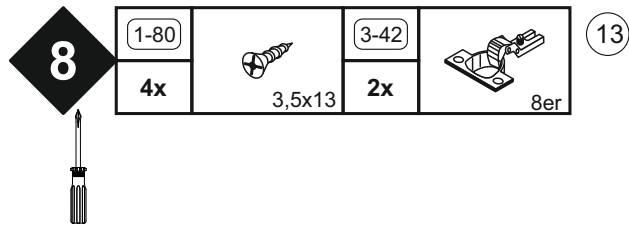


# CHICAGO

11



1-80		1-200	
6x	3,5x13	2x	6,3x13
3-42		6-425	
3x	8er	1x	



22

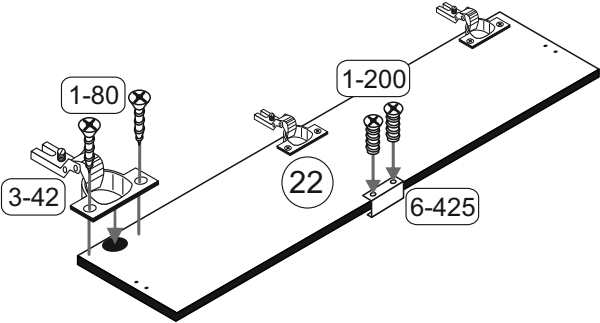





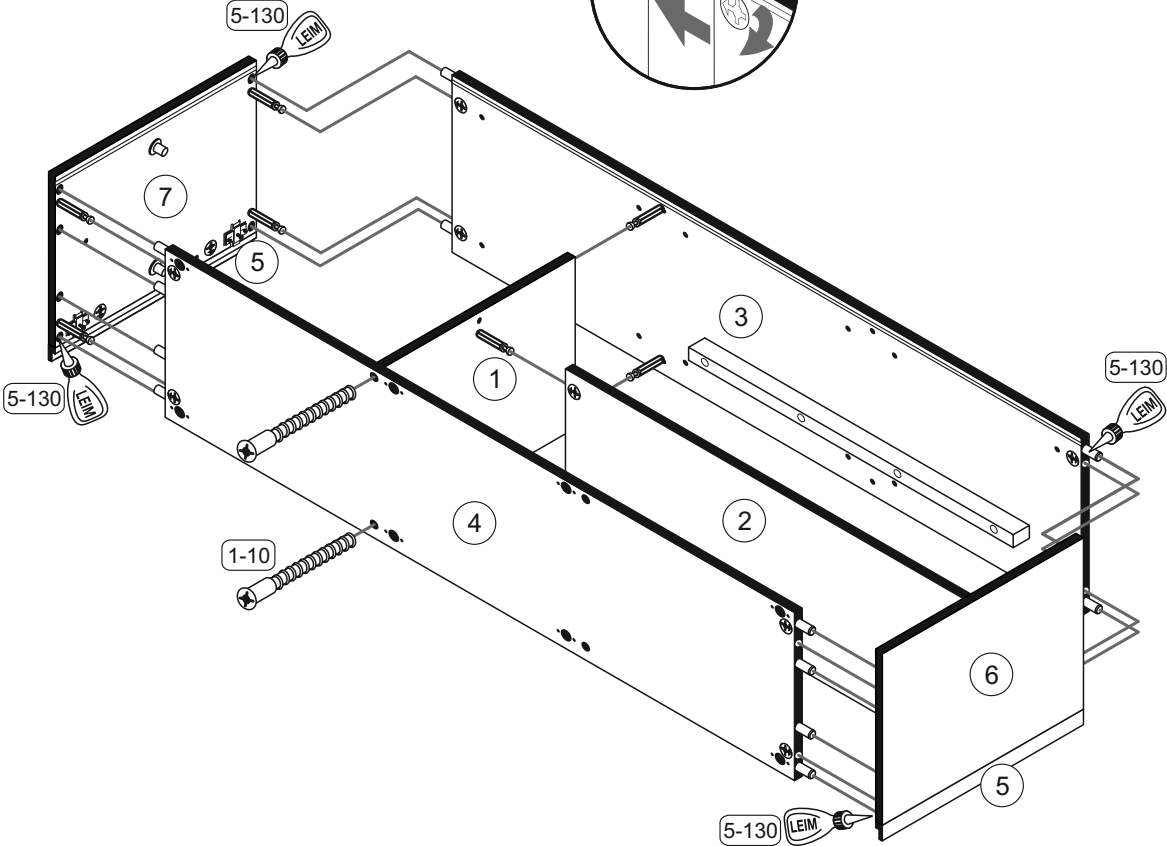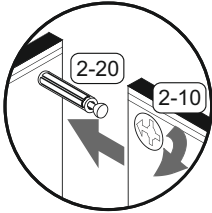


12






1-10		5-130	
2x	6,3x50	1x	LEIM

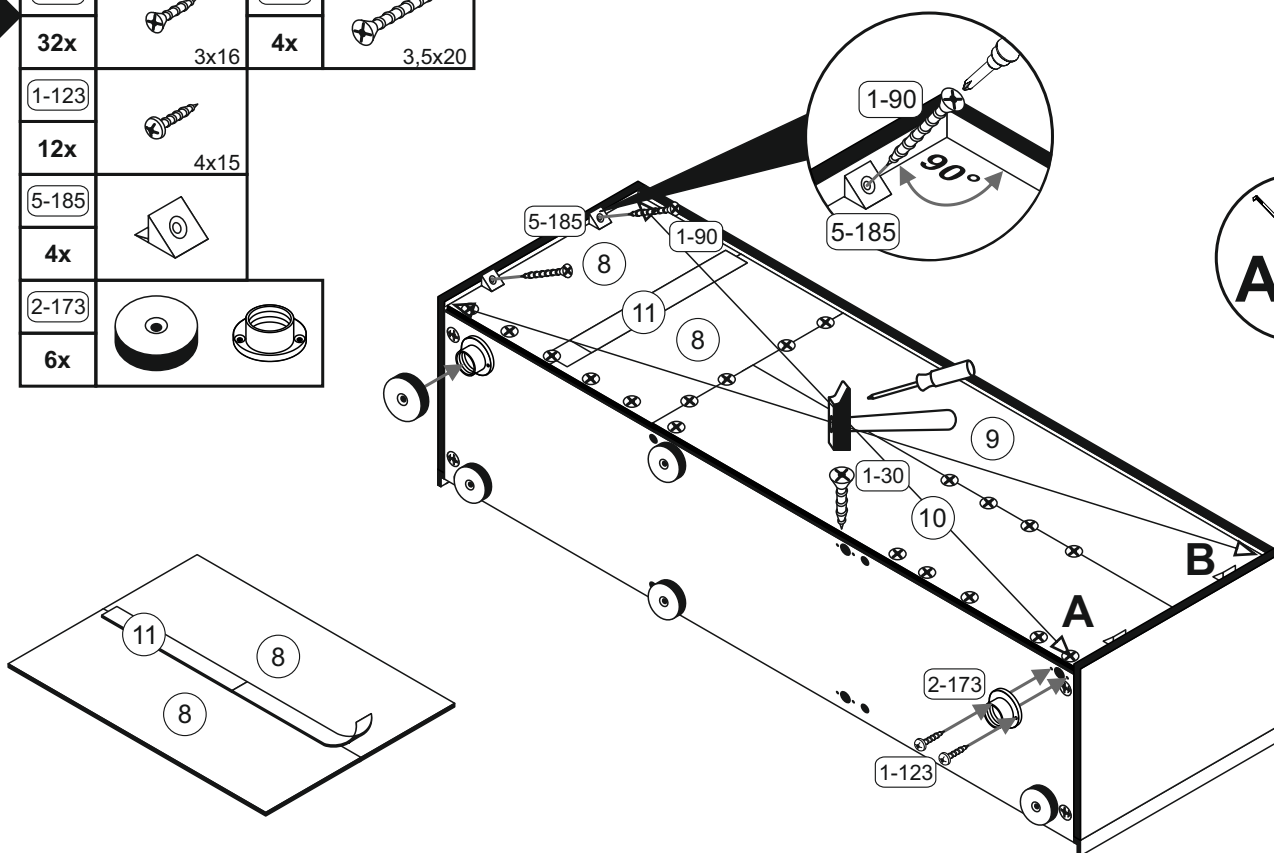

13	1-30		1-90	
	32x	3x16	4x	3,5x20
	1-123			
	12x	4x15		
	5-185			
	4x			
	2-173			
	6x			




14	5-01		5-280	
	10x		1x	

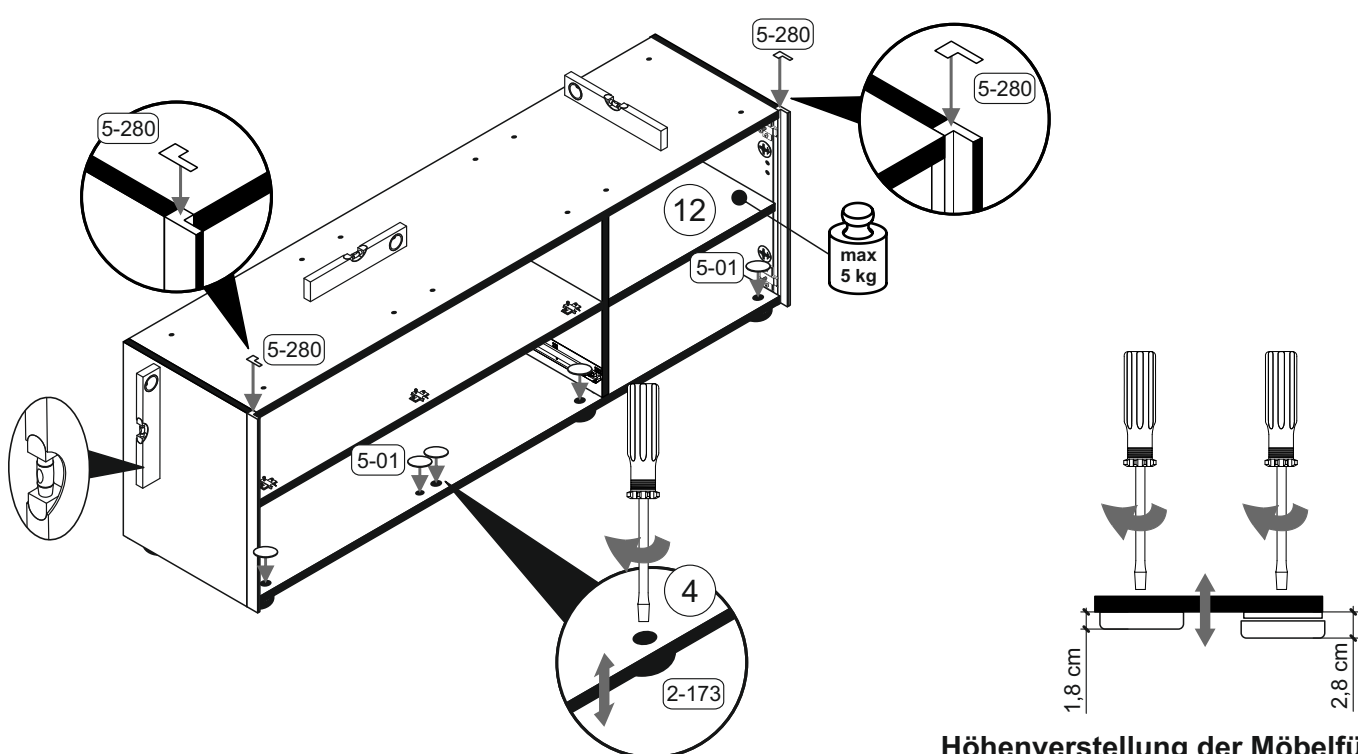


Höhenverstellung der Möbelfüße

15



## Einbau des Schubkastens

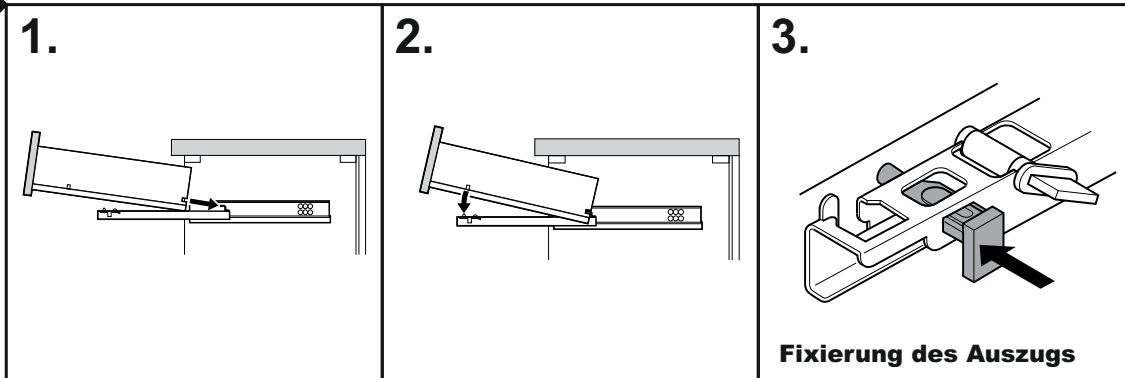


## Ausbau des Schubkastens

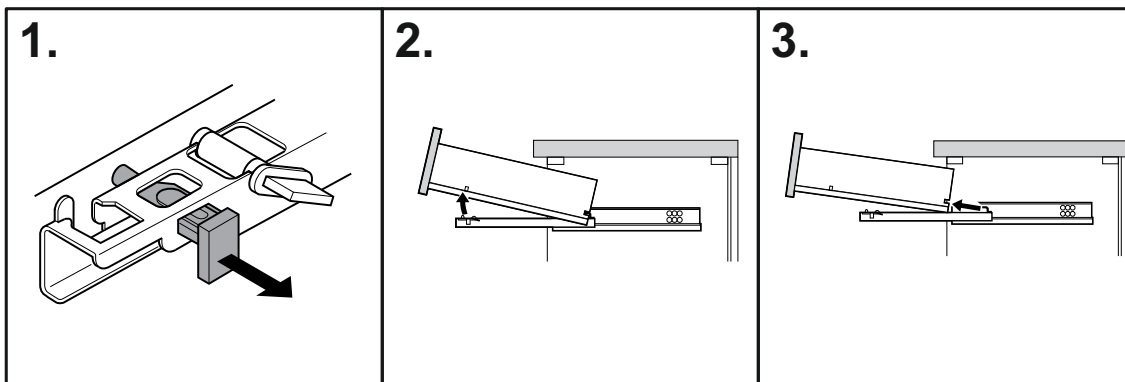


## Höhenverstellung des Schubkastens

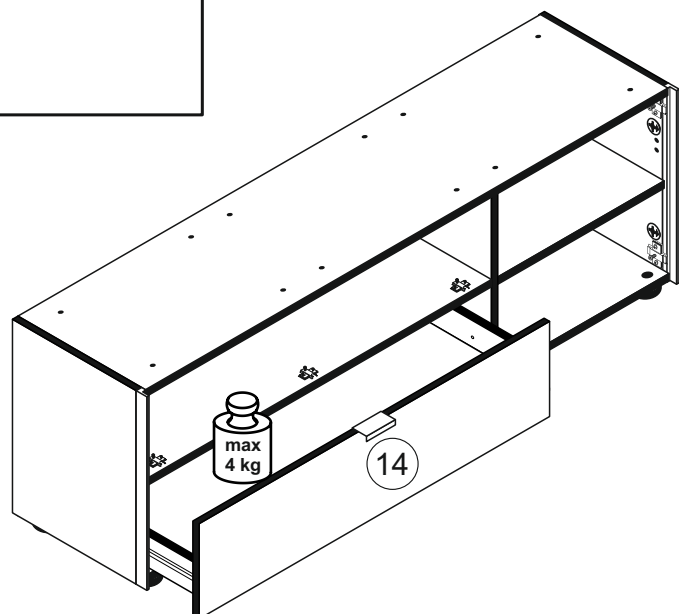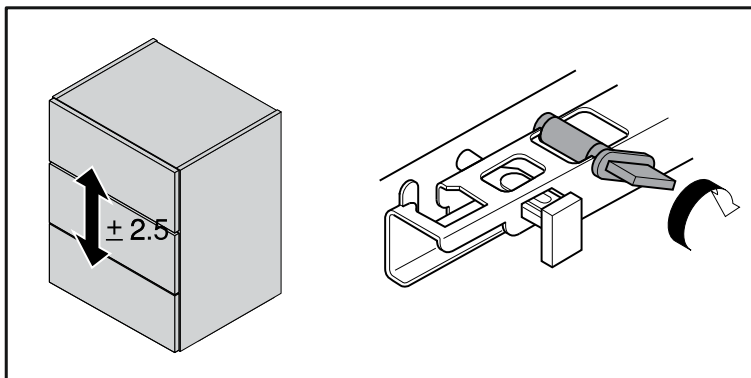





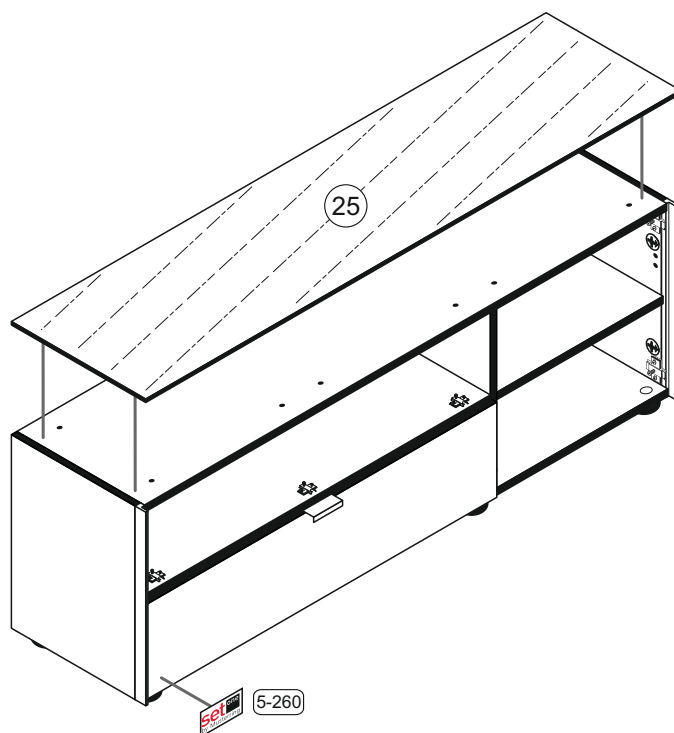


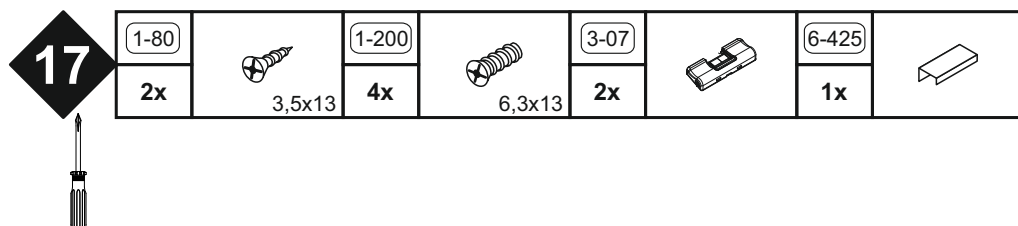

## Stütze unten <sup>(23)</sup> überdrehen

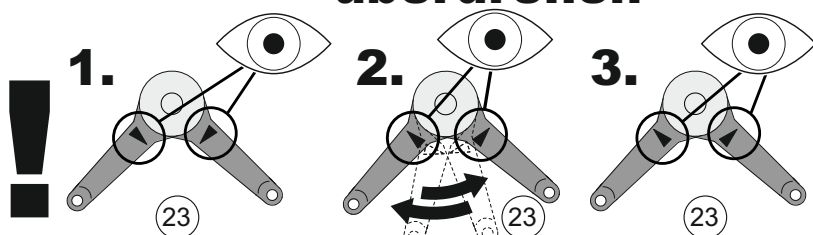

## Montage der Türdämpfung

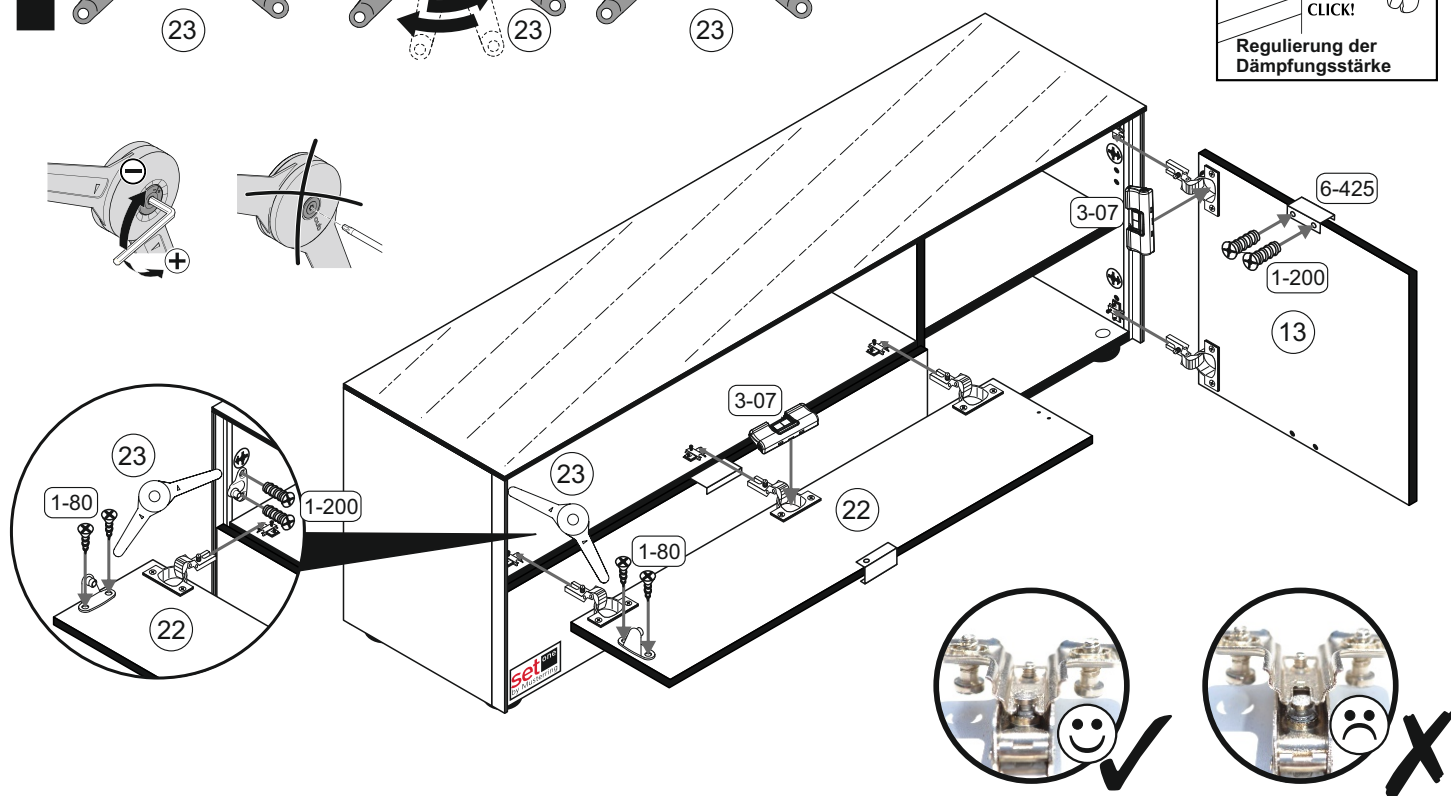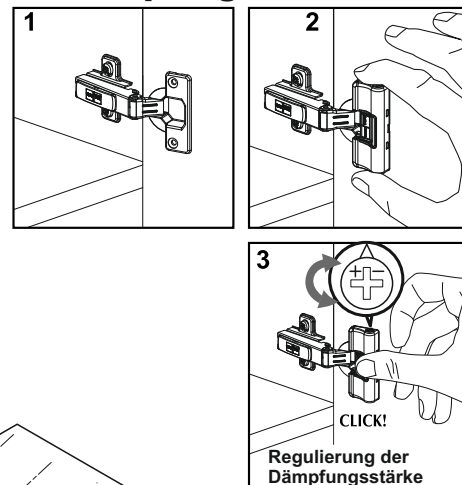

Türen einstellen (Scharniere justieren)  
Adjusting the doors (adjusting the hinges)  
Régler les portes (ajuster les charnières)  
Sistemare le porte (regolare le cerniere)  
Deuren instellen (scharnieren afstellen)  
Nastawić drzwi (wyregulować zawiasy)  
Výrovnejte dvířka (seříd'te závěsy)  
Nastavenie dverí (nastavenie závesov)  
Állítsa be az ajtókat (állítsa be a zsanérokot)  
Reglare usi (ajustare balamale)  
Kapıların ayarlanması (menteselerin seviye ayarı)  
Регулировка дверей (регулировка шарнира)

